

DPI100

Installation Manual



DP1100

INSTALLATION MANUAL





DATALOGIC S.p.A.
Via Candini 2
40012 – Lippo di Calderara di Reno
Bologna - Italy

DP1100

Ed.: 03/2002

ALL RIGHTS RESERVED

Datalogic reserves the right to make modifications or improvements without prior notification.

Datalogic shall not be liable for technical or editorial errors or omissions contained herein, nor for incidental or consequential damages resulting from the use of this material.

Product names mentioned herein are for identification purposes only and may be trademarks and or registered trademarks of their respective companies.

© Datalogic S.p.A. 1996 - 2002

821000003 (Rev. C)

CONTENTS

GUIDE TO INSTALLATION	v
GENERAL VIEW	vi
SAFETY PRECAUTIONS	vii
1 GENERAL FEATURES	8
1.1 Introduction	8
1.2 Available Models	8
1.3 Description	9
1.3.1 Display	9
1.3.2 Keypad	10
1.3.3 LEDs	11
1.3.4 On/Off Switch	11
1.3.5 Removable Compression Connector Panel	12
1.3.6 Communication Interfaces	12
1.3.7 Inputs	12
1.3.8 Outputs	13
2 INSTALLATION	14
2.1 Package Contents	14
2.2 Opening the Device	15
2.2.1 Main Serial Interface Selection	16
2.2.2 Removing/Wiring the Compression Connector Panel	17
2.3 Mechanical Installation	19
2.3.1 Overall Dimensions	19
2.3.2 Mounting DP1100	20
2.4 Power Supply Connections	21
2.5 Main Serial Interface Connections	21
Pinout	22
Grounding Rules	23
RS232 Interface	24
RS485 Full-Duplex Interface	25
RS485 Half-Duplex Interface	26
20 mA Current Loop Interface	29
2.6 Auxiliary RS232 Interface Connections	30
2.7 Barcode Reader Connections	32
2.8 I/O Connections	33
2.8.1 Inputs	33
2.8.2 Outputs	37
2.9 Typical Layouts	39
2.9.1 Pass Through	41

2.9.2	Local Echo	42
2.9.3	Master-Slave (Special Software Versions Only)	43
3	MAINTENANCE	44
3.1	Replacing the Protection Fuse	44
4	TECHNICAL FEATURES	46

GUIDE TO INSTALLATION

The following can be used as a checklist to verify all of the steps necessary for complete installation of the DP1100 decoder.

- 1) Open the decoder to select the main serial interface type as required (see paragraph 2.2).
- 2) Provide correct system cabling according to the signals necessary (see par. 2.4, the applicable sub-paragraphs under 2.5, par. 2.6, 2.7, and 2.8).
- 3) Install the Configuration Disk and configure the software parameters from a host computer using one of the following methods:
 - WinHost interface utility program. For more details refer to the WinHost Help On Line.
 - Host Mode programming procedure by ESC sequences via the serial interface. For more details refer to the hdp1100 file installed in the DP1100 directory.
 - Keyboard Mode through the keypad and the display. For more details refer to the kdp1100 file installed in the DP1100 directory.



NOTE

Fine tuning of the scanner position for barcode reading can be accomplished using the Test Mode. For further details refer to the section "Test Mode" in the WinHost Help On-Line.

The installation is now complete.

GENERAL VIEW

DP1100

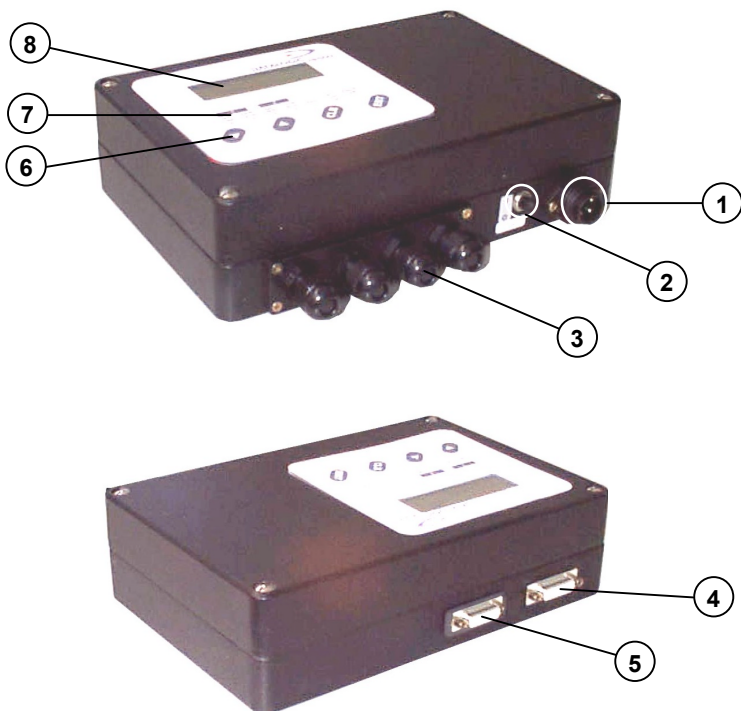


Figure A

- | | |
|--|-------------------------|
| ① Power Supply Connector | ⑤ Scan Head 1 Connector |
| ② On/Off Switch | ⑥ Keypad |
| ③ Compression Connector Panel | ⑦ LEDs |
| ④ Scan Head 2 Connector
(only for 2 Scan Head models) | ⑧ LCD Display |

SAFETY PRECAUTIONS

This product conforms to the applicable requirements contained in the European Standard for electrical safety EN-60950 at the date of manufacture.



This symbol refers to operations that must be performed by qualified personnel only. Example: opening the device.



This symbol refers to operations where there is danger of electrical shock. Before opening the device make sure the power cable is disconnected to avoid electric shock.

This device must be installed to a power source equipped with on/off switch or breaker within range of the operator as protection against grounding failures.

This device is protected against overloading by a correct value fuse. For protection fuse replacement make sure the correct value fuse is installed. This information is in par. 3.1.

1 GENERAL FEATURES

1.1 INTRODUCTION

The DP1100 is a decoder for barcode scanners designed to satisfy the most demanding requirements associated with high performance scanning.

Standard Application Program

A Standard Application Program is factory-loaded onto the DP1100. This program controls barcode reading, serial port interfacing, data formatting and many other operating and control parameters.

It is completely user configurable from a host computer using the WinHost interface utility program provided on diskette with the decoder or using the Keyboard Mode through the keypad and the display or using the Host Mode programming procedure, by ESC sequences via the serial interface.

There are different programmable operating modes to suit various barcode reading system requirements. Included in these is a test mode to verify the reading features and exact positioning of the barcode reader without using external tools.

Programmability


If your requirements are not met by the Standard Application Program, Custom Application Programs can be developed by your local Datalogic distributor.

1.2 AVAILABLE MODELS

The DP1100 is available in versions that differ in regard to the following parameters:

- Number of connected scan heads
- Supply voltage

The following models are therefore available:

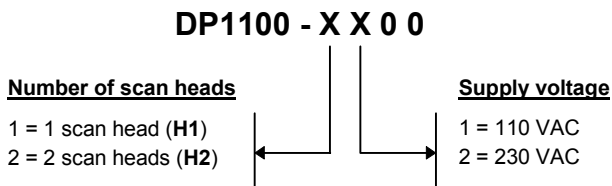

To simplify descriptions in this manual, hereon the designations **H1** and **H2** will be used to indicate 1 scan head and 2 scan head models respectively.

1.3 DESCRIPTION

Some of the main features of this decoder are given below:

- completely configurable from host computer
- 3 output signals (open collector, open emitter)
- 2 serial communication interfaces
- reads all popular codes
- connection to two scan heads (H2 models only)
- connections to a PLC using Siemens protocols
- configurable in different operating modes to suit the most various barcode reading system requirements
- test mode to verify the reading features and exact positioning of the scanner without the need of external tools
- code verifier
- PCS (H1 models only)

Optional boards can be mounted to increase the number of communication interfaces. For more details refer to your local Datalogic distributor.

IP65 protection class can be obtained to make DP1100 particularly suitable for industrial environments where high protection against harsh external conditions is required. For more details refer to your local Datalogic distributor.

The DP1100 is contained in a rugged aluminum housing; the mechanical dimensions are 240 x 200 x 66 mm (9.44 x 7.87 x 2.59 in) and it weighs about 2.8 Kg (98.76 oz.).

1.3.1 Display

The DP1100 is equipped with a 20 character x 4 line backlit LCD. The LCD is used by the Standard Application Program to display programming and error messages, to view current configuration parameters and user menus.

For H2 models (see paragraph 1.2), the first two LCD lines refer to the results of the first scanner connected to the decoder, while the last two LCD lines refer to the scanning results of the second scanner connected to the decoder.

If a code is longer than the available number of characters in the LCD, it is not completely displayed, however it is completely transmitted to the host computer.

1.3.2 Keypad

There are four keys, marked with the symbols Up-arrow, Down-arrow, CLR and ENT; this keypad is mainly used to configure the DP1100 locally when remote configuration via a supervisor computer is not required.

To enter into keyboard programming mode, press the **UP-arrow** and **ENT** keys simultaneously. When you are working with the DP1100 Standard Application Program, these particular keys have the following functions:



This key scrolls functions or programmable data UP.



This key scrolls functions or programmable data DOWN.



This key allows you to return to the function of the previous menu.



This key enables the function or selects the value of the data shown on the display.

For further information on the use of these keys refer to the kdp1100 file installed in the DP1100 Directory.

1.3.3 LEDs

The 7 colored LEDs on the DP1100 front panel are shown in the following figure:

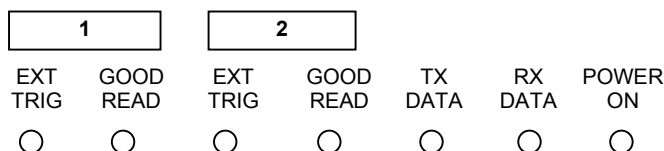


Figure 1 - DP1100 LEDs

The first two LEDs refer to scan head 1 connected to the decoder. The next two LEDs refer to scan head 2 for H2 models.

The LEDs indicate:

- EXT TRIG** YELLOW LED indicates the code presence sensor is active (for details refer to the Help On Line of the WinHost utility program).
- GOOD READ** RED LED is used to signal successful barcode decoding. It is also used in Test mode to signal the decoding (for details refer to the section "LED Threshold" in the Help On Line of the WinHost utility program).
- TX DATA** GREEN LED indicates transmission of data relative to the code or to programming running on the main serial interface.
- RX DATA** GREEN LED indicates reception of data relative to the code or to programming running on the main serial interface.
- POWER ON** RED LED indicates the decoder is powered.

1.3.4 On/Off Switch

The on/off switch can be used to turn the device off if an emergency on the system occurs. The device can also be turned off for working on the internal cabling or other particular maintenance.

1.3.5 Removable Compression Connector Panel

To make installation and replacement easier, the DP1100 is made up of two parts:

- 1) the body of the device with all standard electronic components and optional boards;
- 2) the removable panel housing the compression connectors for all external communication cables;

This panel houses four compression connectors for I/O and serial interface connections.

1.3.6 Communication Interfaces

The DP1100 is equipped with the following serial communication types for its main serial interface:

RS232

RS485 FULL-DUPLEX

RS485 HALF-DUPLEX

20 mA CURRENT LOOP

The DP1100 also supports an RS232 auxiliary interface to be connected to another host computer or for particular layouts such as Pass Through.

Details regarding the connections and use of the interfaces are given in chapter 2.

1.3.7 Inputs

PS1 presence sensor inputs (and PS2 for H2 models), allow code reading and consequent decoding to be synchronized with an external sensor, as in On Line operating mode.

During the PRESENCE SENSOR active phase, the yellow LED on the front of DP1100 is activated and VIDEO and SCAN signals for decoding are acquired from the scanner.

PS1AUX (and PS2AUX for H2 models) are auxiliary presence sensor inputs used to indicate to the decoder what code to store as the verifier code. For further details refer to the section "Store Verifier HW" in the WinHost Help On Line.

1.3.8 Outputs

Three outputs are present to signal if the barcode reading has been performed or not. They have different meanings depending on the model used.

H1 models:

- NO READ output
- RIGHT output
- WRONG output (Code Verifier and PCS)

The NO READ output activates when the code signaled by the presence sensor is not decoded.

The RIGHT output activates when the code is decoded correctly.

The WRONG output is used either in Code Verifier or PCS modes. See WinHost Help On Line.

H2 models:

- NO READ 1 output for scan head 1
- RIGHT 1 output for scan head 1
- RIGHT 2 output for scan head 2 (Code Verifier only)

The NO READ output activates when the code signaled by the presence sensor is not decoded.

The RIGHT output activates when the code is decoded correctly.

For further details on these outputs, refer to the relative sections in the WinHost Help On Line.

2 INSTALLATION

2.1 PACKAGE CONTENTS

Verify that the DP1100 reader and all the parts supplied with the equipment are present and intact when opening the packaging; the list of parts includes:

- DP1100 decoder
- Installation manual
- DP1100 configuration program disk
- Terminal block connectors
- Power supply connector

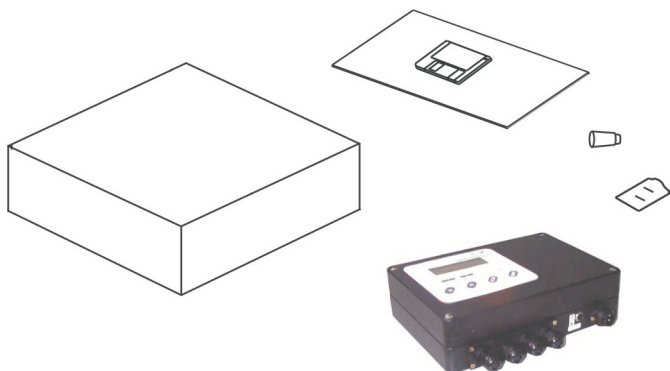


Figure 2 - DP1100 package contents



2.2 OPENING THE DEVICE

Before installing the DP1100 it may be necessary to open it to perform the following operations:

- Select the required main serial interface (par. 2.2.1)
- Set the multiplexer address selection on the DIP switch (par. 2.5 under "RS485 Half-Duplex Interface")
- Change cable connections on the compression connector panel (par. 2.2.2)
- Mount the decoder on a panel or a wall (par. 2.3)

You have to remove the top panel to perform all these operations; you also have to remove the compression connector panel to change cable connections.



WARNING

The decoder must be disconnected from the power supply during this operation.

Refer to the following instructions and diagram below when opening the decoder:

- 1) Turn the DP1100 off.
- 2) Disconnect the power supply cable.
- 3) Unscrew the four screws as shown below to open the decoder.
- 4) Carefully remove the cover of the decoder while paying attention to the cable that is connected to the electrical ground; this cable is long enough to allow you to lay the cover to the side while operating inside the device.

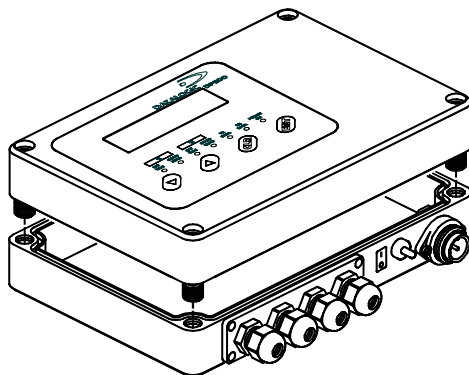


Figure 3 - Opening the DP1100



2.2.1 Main Serial Interface Selection

One of the following interface types can be selected to connect the main interface of the DP1100 to the host computer:

RS232	20 mA CURRENT LOOP
RS485 HALF-DUPLEX	RS485 FULL-DUPLEX

To select the interface type, position the jumper block as indicated in the following figure:

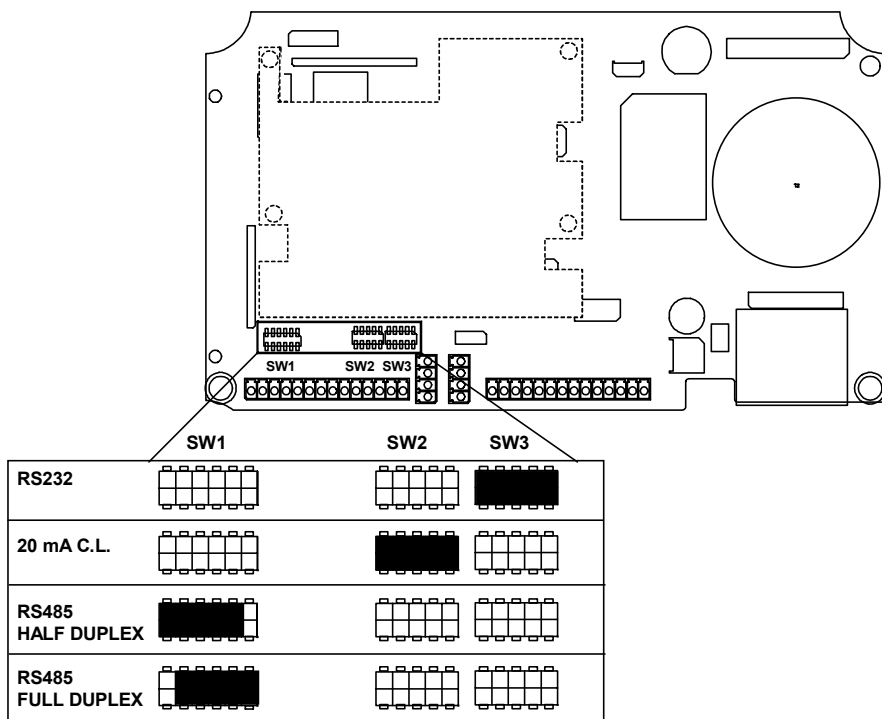


Figure 4 - Interface type selection



The RS232 interface type is factory set.

NOTE



2.2.2 Removing/Wiring the Compression Connector Panel

After opening the decoder you must remove the panel housing the compression connectors to connect or change the internal cabling to the DP1100.

To connect an external cable to the DP1100, proceed as follows:

- 1) Turn the DP1100 off.
- 2) Disconnect the power supply cable.
- 3) Open the DP1100 as described in paragraph 2.2.
- 4) Using a screwdriver, unlock the screws that fix the compression connector panel and remove it from the DP1100 body.
- 5) Unscrew the compression connectors and pass the cables through them.
- 6) Cut the insulation of the cable on the DP1100 side by a few centimeters.
- 7) Strip the individual wires by a few millimeters.
- 8) Loosen the terminal block connector screw of the selected position, insert the wire and tighten the screw (see Figure 5).
- 9) After inserting all the wires in the terminal block connectors, pass them through the compression connector panel hole and insert them into the base again (see Figure 6 and Figure 7).
- 10) Affix the compression connector panel to the DP1100 body with the proper screws adjusting the cables to the proper length through each compression connector and then tightening the compression connectors.

 


Figure 5 - Inserting the wire

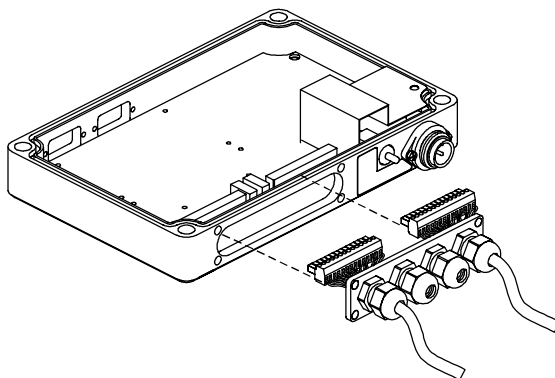


Figure 6 - DP1100 view

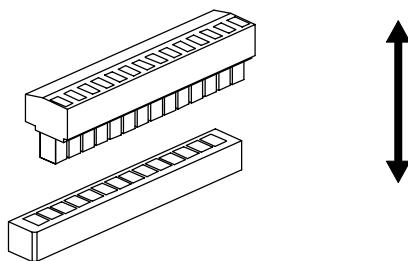


Figure 7 - Terminal block connector and base

2.3 MECHANICAL INSTALLATION

2.3.1 Overall Dimensions

The figure below gives the overall dimensions of the decoder and its relative mounting holes and may be used for its installation.

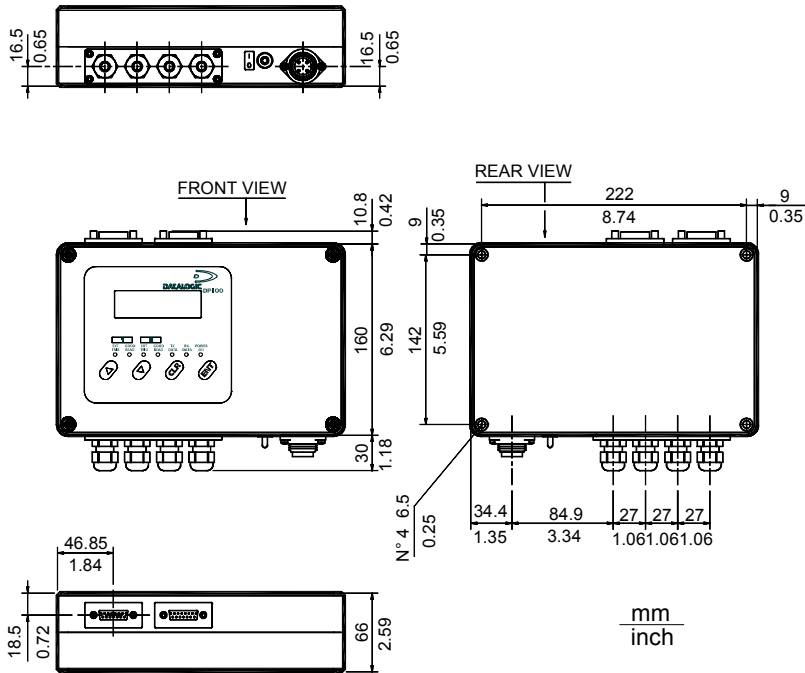


Figure 8 - Overall dimensions

2.3.2 Mounting DP1100

DP1100 can be mounted on a wall or a panel. To do this:

- 1) Open the decoder as described in paragraph 2.2.

If necessary, using the two mounting holes inside the DP1100 as a pattern, mark the panel or the wall with an appropriate object and then drill two pilot holes in the panel or in the wall.

- 2) Align the decoder and insert two appropriate screws (M5 x 35 UNI 6107 or M5 x 40) with their washers and then screw them into the panel or the wall until tight (see Figure 9).





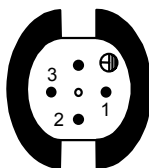
Figure 9 - Mounting DP1100

2.4 POWER SUPPLY CONNECTIONS

All versions of DP1100 are powered from the AC mains (see paragraph 1.2). A connection cable terminated with the 4-pin male connector provided with the package is used.

Pin	Name
1	NEUTRAL
2	LINE
	GND

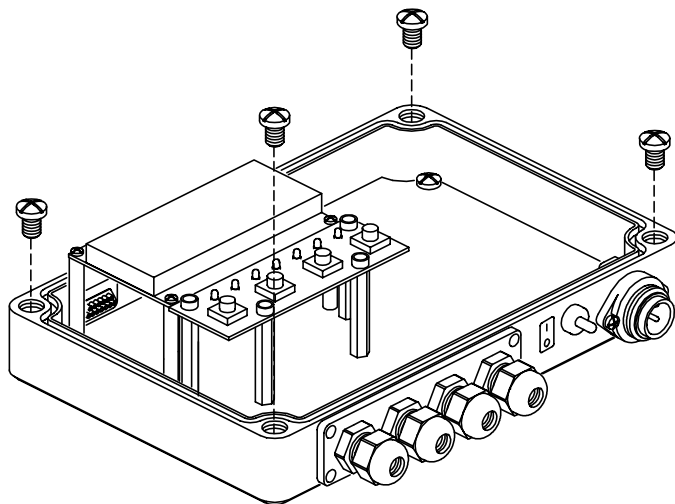A.C. CONNECTION



4-PIN MALE
CONNECTOR

Figure 10 - Power supply connector - Cable side view

2.5 MAIN SERIAL INTERFACE CONNECTIONS

The signals relative to the following serial interface types are available for the DP1100 main serial interface:

RS232

RS485 HALF-DUPLEX

RS485 FULL-DUPLEX

20mA CURRENT LOOP

DP1100 automatically recognizes the type of interface selected at each power on of the decoder.

If the recognized interface type is not compatible with the current communication handshaking, then the system forces the XON/XOFF protocol.

The parameters relative to the main interface (baud rate, data bits, etc.) can be defined using the WinHost utility program or Keyboard Mode programming or Host Mode programming. For more details refer to the section "Main Interface Menu" in the Help On Line of the WinHost utility program.

Pinout


The terminals of the internal connectors are numbered as illustrated in Figure 11 depending on the model:



CAUTION

Do not connect GND and SGND to different (external) ground references. GND and SGND are internally connected through filtering circuitry which can be permanently damaged if subjected to voltage drops over 0.8 Vdc.

H1 models

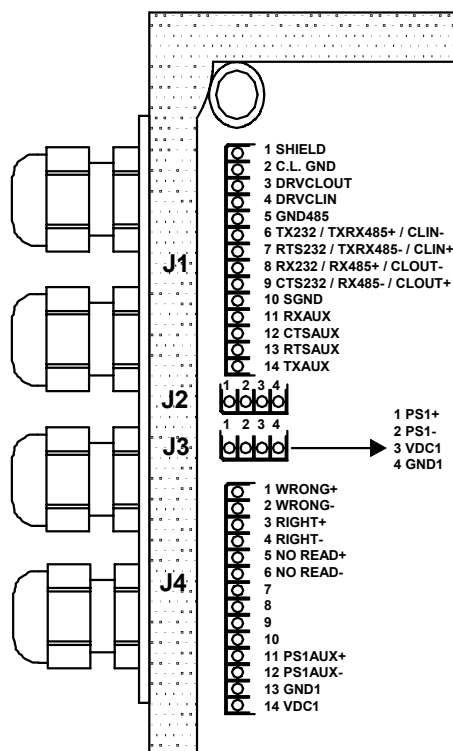

H2 models

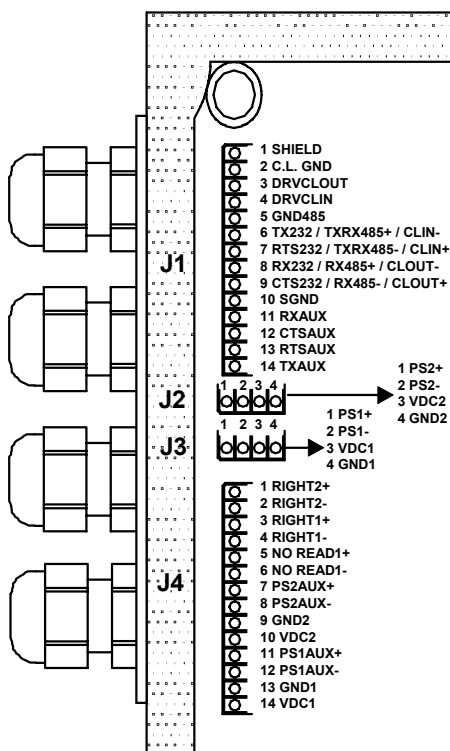


Figure 11 - Internal connectors pinouts

Grounding Rules

Shielding the communication cable is an effective way to protect against capacitive conduction and radiated interference, while the effect against noise due to inductive coupling is small. In any case, the shielding effect occurs only if the shield is grounded; otherwise the entire voltage of the shielded material will be floating and will not give protection against electrical noise.

When installing the DP1100 in a large system, remember that a voltage drop may occur between ground connections made at distant points. This could be the undesirable effect of variable electromagnetic fields due, for instance, to the presence of engines, leakage currents, lightning or other sources. For long distances between the devices (about 50 meters, but this length depends widely on the environment), the voltage drop between ground connections can be 100 V or higher.

If you ground the shield in several points the voltage drop across the shield will cause a current, increasing the noise on the signal wires.

Therefore, to avoid damage to the device drivers and loss of system performance in general, the shield should be grounded at most in one point only.

Since the shielding protection is more effective near to the ground connection, it is advisable to ground the shield where electric noise is higher. The shield is provided on J1 Pin 1.

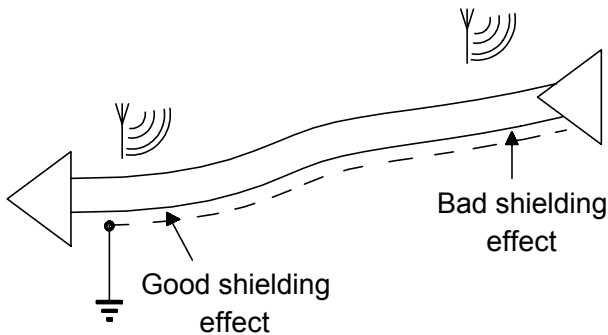



Figure 12 - Shield grounding effect

RS232 Interface

The serial interface is used in this case for point-to-point connections; it handles communication with the host computer and allows both transmission of code data and the configuration of the decoder.

The terminals of the external cable must be connected to the following pins of connector J1 (see Figure 11) for RS232 interface connection:

RS232 connection		
Pin	Name	Function
6	TX232	Transmitted Data
7	RTS232	Request to Send
8	RX232	Received Data
9	CTS232	Clear to Send
10	SGND	Signal Ground

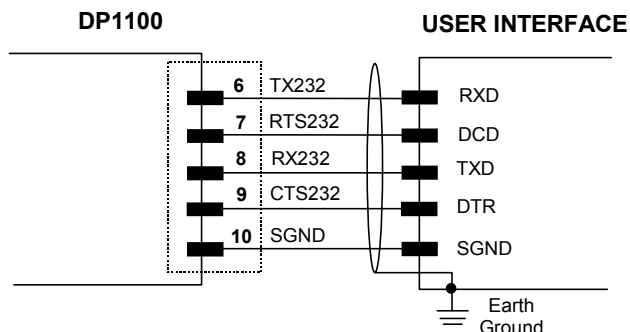

RTS/CTS HARDWARE HANDSHAKING ENABLED

Figure 13 - RS232 main interface connections

It is always advisable to use shielded cables. The overall maximum cable length must be less than 15 m (49.2 ft).

To select this interface type, follow the instructions in paragraph 2.2.1.

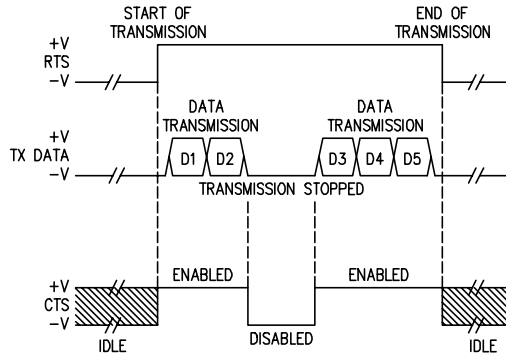


Figure 14 - RS232 control signals

The RTS232 and CTS232 signals control data transmission and synchronize the connected devices.

If the RTS/CTS handshaking protocol is enabled, the DP1100 activates the RTS232 output to indicate a message is to be transmitted. The receiving unit activates the CTS232 input to enable the transmission.

RS485 Full-Duplex Interface

The RS485 Full-Duplex (5 wires + shield) interface is used for non-pollled communication protocols in point-to-point connections over longer distances (max 1200 m / 3940 ft) than those acceptable for RS232 communications or in electrically noisy environments.

The terminals of the external cable must be connected to the following pins of connector J1 (see Figure 11) for RS485 Full-Duplex communications:

RS485 Full-Duplex connection		
Pin	Name	Function
5	GND485	Signal Ground
6	TXRX485+	RS485 Output (+)
7	TXRX485-	RS485 Output (-)
8	RX485+	RS485 Input (+)
9	RX485-	RS485 Input (-)

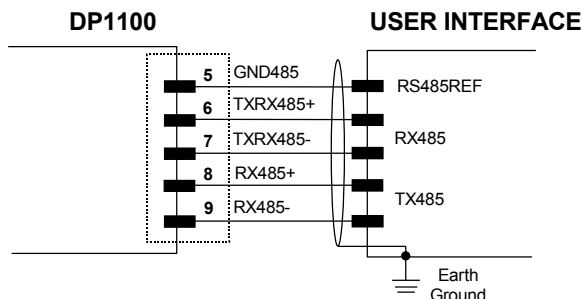


Figure 15 - RS485 Full-Duplex connections

To select this interface type, follow the instructions in paragraph 2.2.1.

RS485 Half-Duplex Interface

The terminals of the external cable must be connected to the following pins of connector J1 (see Figure 11) for RS485 Half-Duplex communications:

RS485 Half-Duplex connection		
Pin	Name	Function
5	GND485	Signal Ground
6	TXRX485+	RS485 Input/output (+)
7	TXRX485-	RS485 Input/output (-)

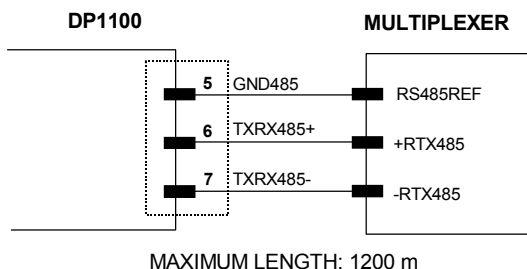


Figure 16 - RS485 Half-Duplex connections

To select this interface type, follow the instructions in paragraph 2.2.1.

For this interface type, the multidrop address must also be be set on the DIP switch as shown in the figure below. Refer to paragraph 2.2 for details on how to open the DP1100. Record this information for further setup of the multidrop line.

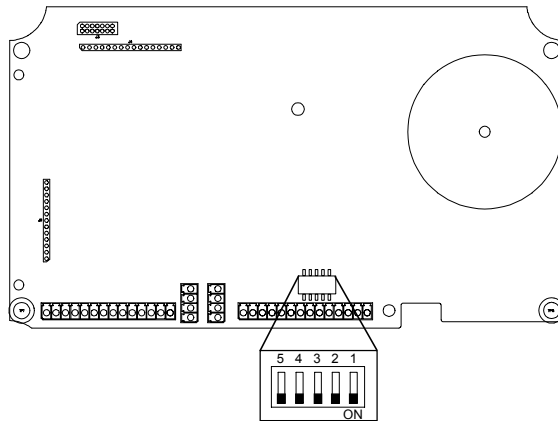


Figure 17 - DIP switch for multiplexer address selection

The following table shows the multiplexer address settings where:

0 = ON 1 = OFF

Position					Address	Position					Address
5	4	3	2	1		5	4	3	2	1	
1	1	1	1	1	31	0	1	1	1	1	15
1	1	1	1	0	30	0	1	1	1	0	14
1	1	1	0	1	29	0	1	1	0	1	13
1	1	1	0	0	28	0	1	1	0	0	12
1	1	0	1	1	27	0	1	0	1	1	11
1	1	0	1	0	26	0	1	0	1	0	10
1	1	0	0	1	25	0	1	0	0	1	9
1	1	0	0	0	24	0	1	0	0	0	8
1	0	1	1	1	23	0	0	1	1	1	7
1	0	1	1	0	22	0	0	1	1	0	6
1	0	1	0	1	21	0	0	1	0	1	5
1	0	1	0	0	20	0	0	1	0	0	4
1	0	0	1	1	19	0	0	0	1	1	3
1	0	0	1	0	18	0	0	0	1	0	2
1	0	0	0	1	17	0	0	0	0	1	1
1	0	0	0	0	16	0	0	0	0	0	0

Example address selections for DP1100 Multidrop connections:



Figure 18 - DP1100 multidrop address selections

The following figure shows a multidrop configuration with DP1100 decoders and a multiplexer connected.

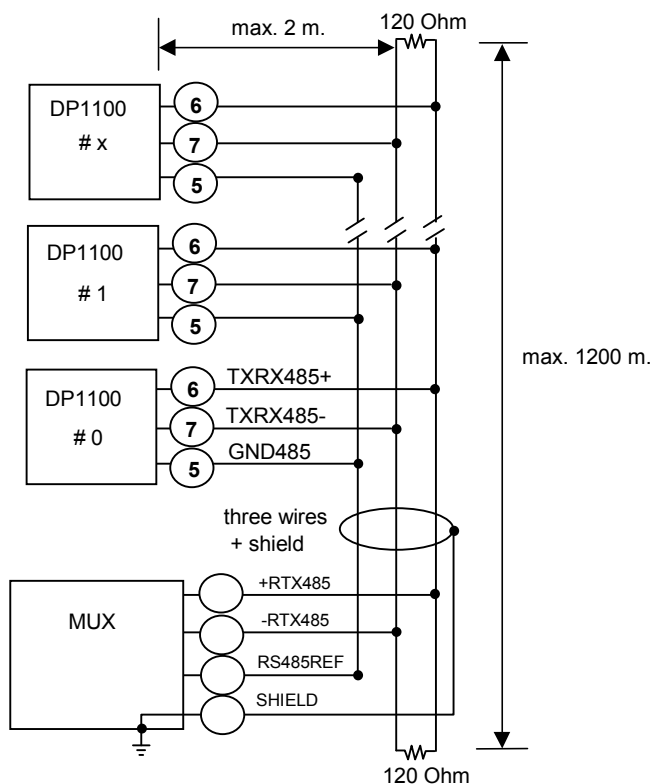


Figure 19 - DP1100 multidrop connection to a multiplexer

20 mA Current Loop Interface

The DP1100 has two current generators (one for transmission and one for reception), allowing active and passive type connections.

The terminals of the external cable must be connected to the following pins of connector J1 (see Figure 11) for 20 mA Current Loop communications:

20 mA C.L. connection		
Pin	Name	Function
2	C.L. GND	Generator Reference
3	DRVCLOUT	Output Current Generator
4	DRVCLIN	Input Current Generator
6	C.L. IN-	Current Loop Input (-)
7	C.L. IN+	Current Loop Input (+)
8	C.L. OUT-	Current Loop Output (-)
9	C.L. OUT+	Current Loop Output (+)

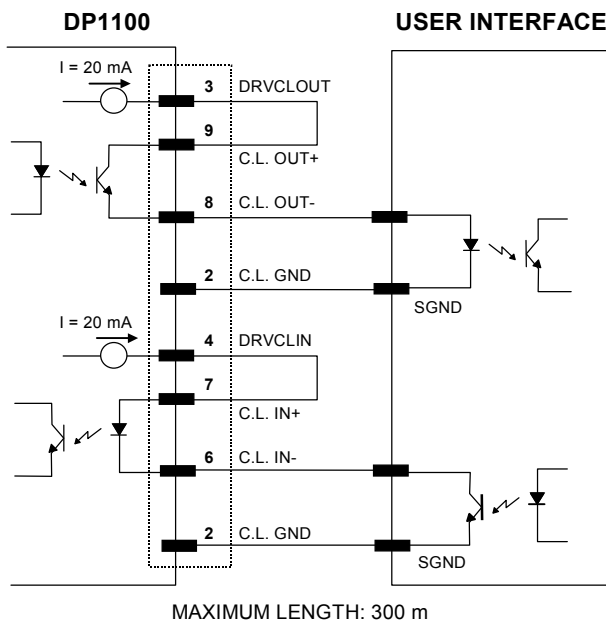


Figure 20 - 20 mA C.L. active connections

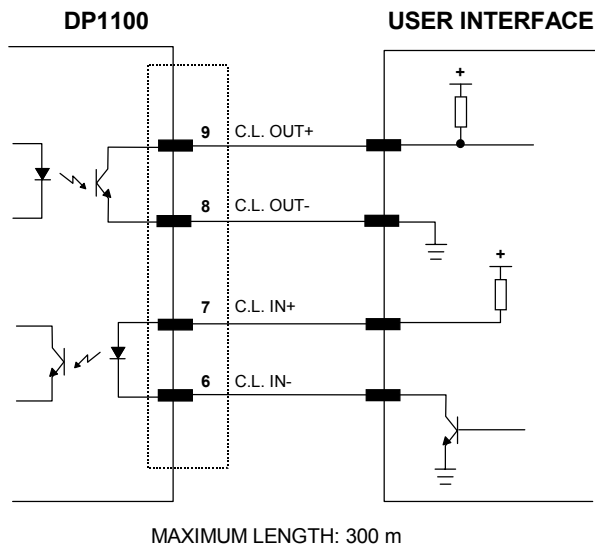


Figure 21 - 20 mA C.L. passive connections

To select this interface type, follow the instructions in paragraph 2.2.1.

2.6 AUXILIARY RS232 INTERFACE CONNECTIONS

The auxiliary serial interface is used exclusively for RS232 point-to-point connections.

The parameters relative to the auxiliary interface (baud rate, data bits, etc.) as well as particular operating modes such as local echo can be defined using the WinHost utility program or Keyboard Mode programming or Host Mode programming. For more details refer to the section "Auxiliary Interface Menu" in the Help On Line of the WinHost utility program.

The terminals of the external cable must be connected to the following pins of connector J1 (see Figure 11) to connect the RS232 auxiliary interface:

RS232 auxiliary connection		
Pin	Name	Function
11	RXAUX	Auxiliary Input
12	CTSAUX	Auxiliary Handshake
13	RTSAUX	Auxiliary Handshake
14	TXAUX	Auxiliary Output
10	SGND	Signal Ground

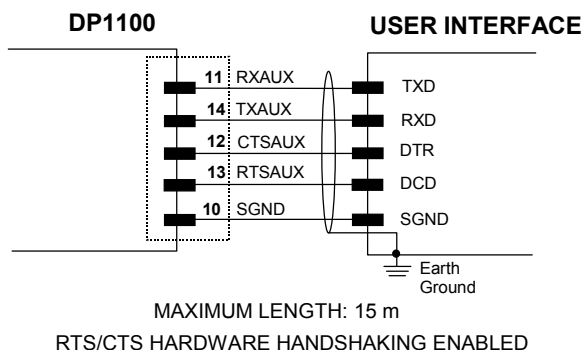


Figure 22 - RS232 auxiliary interface connections

The RTSAUX and CTSAUX signals control data transmission and synchronize the connected devices. If the RTS/CTS handshaking protocol is enabled, the DP1100 activates the RTSAUX output to indicate a message is to be transmitted. The receiving unit activates the CTSAUX input to enable the transmission.

2.7 BARCODE READER CONNECTIONS

The DP1100 can be connected to one (H1 models) or two (H2 models) barcode readers such as LS4100 or LS6100 through the 15-pin connector(s) illustrated in figure Figure 23.

 


Figure 23 – 15-pin female connector type D

The following pins are available:

Barcode reader connector pinout		
Pin	Name	Function
1	GND	Ground
2	VDC	Operating Voltage
3	- VIDEO	Complementary Video Signal
4	+ VIDEO	Video Signal Representing Code
5	+ SCAN	Scan Start
6	- SCAN	Complementary Scan Start
7	N.C.	Not Connected
8	N.C.	Not Connected
9	I.U.	Internal Use
10	I.U.	Internal Use
11	CODE	Good Read Signal
*12	I.U.	Internal Use
13	RESOL	Resolution Signal
14	BS	Beam Shutter (Laser Off Signal)
15	N.C.	Not Connected

* For **H1 models only** this is the PCS (Print Contrast Signal) for connection to an LS4100 barcode reader.

2.8 I/O CONNECTIONS

2.8.1 Inputs

PS1 and PS1AUX presence sensor inputs refer to scan head 1, while PS2 and PS2AUX presence sensor inputs refer to scan head 2 (H2 models only). For more details refer to paragraph 1.3.7.

The signals relative to these sensors must be connected to the decoder via the proper internal connectors J2, J3 and J4 (see Figure 11), respecting the following connections:

Connector J2		
Pin	Name	Function
*1	PS2+	Presence Sensor 2 (+)
*2	PS2-	Presence Sensor 2 (-)
*3	VDC2	PS2 Operating Voltage
*4	GND2	PS2 Signal Ground

Connector J3		
Pin	Name	Function
1	PS1+	Presence Sensor 1 (+)
2	PS1-	Presence Sensor 1 (-)
3	VDC1	PS1 Operating Voltage
4	GND1	PS1 Signal Ground

Connector J4		
Pin	Name	Function
*7	PS2AUX+	Auxiliary Presence Sensor 2(+)
*8	PS2AUX-	Auxiliary Presence Sensor 2 (-)
*9	GND2	PS2 Signal Ground
*10	VDC2	PS2 Operating Voltage
11	PS1AUX+	Auxiliary Presence Sensor 1(+)
12	PS1AUX-	Auxiliary Presence Sensor 1 (-)
13	GND1	PS1 Signal Ground
14	VDC1	PS1 Operating Voltage

* H2 models only

A PRESENCE SENSOR input can be driven by sensors with NPN or PNP output and is optoisolated to assure maximum disturbance immunity.



The electrical features are:

- maximum voltage applicable at input: 30 V.
- maximum current: 20 mA.

VDC1 and VDC2 and their relative ground references (GND1, GND2) supply power to the presence sensor from DP1100 with the following characteristics:

- typical voltage: 12 V.
- maximum current: 50 mA.


A debounce filter is present on both inputs: the nominal value of the delay is 5 ms.

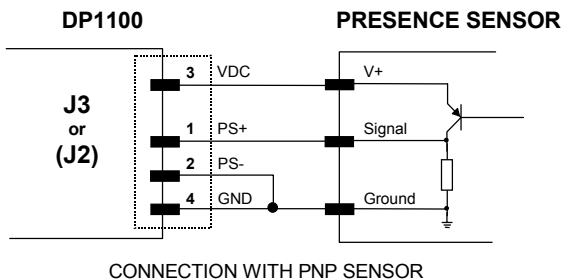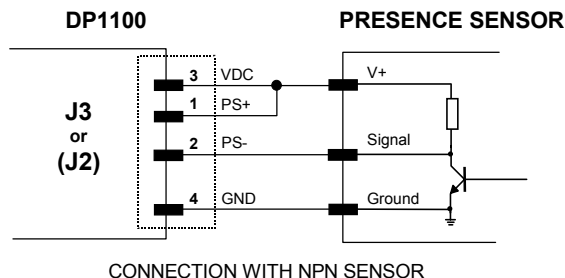

PS+ = PS1+ or (PS2+)
 PS- = PS1- or (PS2-)
 VDC = VDC1 or (VDC2)
 GND = GND1 or (GND2)

Figure 24 - Presence sensor input connections



For H2 models, when 2 scanners are connected to DP1100 in a Single Reading layout, the presence sensors inputs should be connected in parallel to a single NPN sensor. These connections are provided in the following figure.

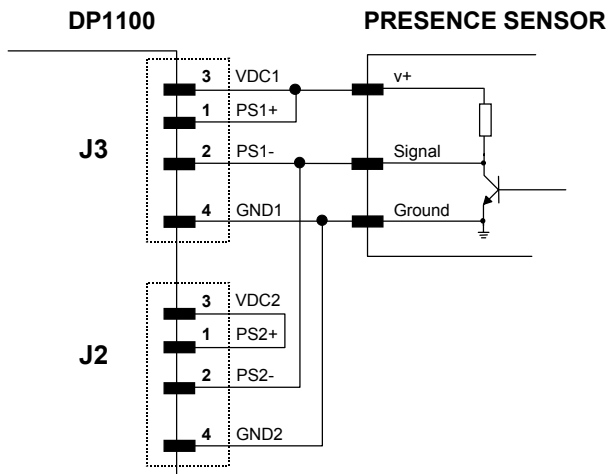

PARALLEL CONNECTION WITH NPN SENSOR

Figure 25 - Connection for Single Reading with 2 scanners

For the device configuration refer to the section "Reading Mode" in the Help On Line of the WinHost utility program.

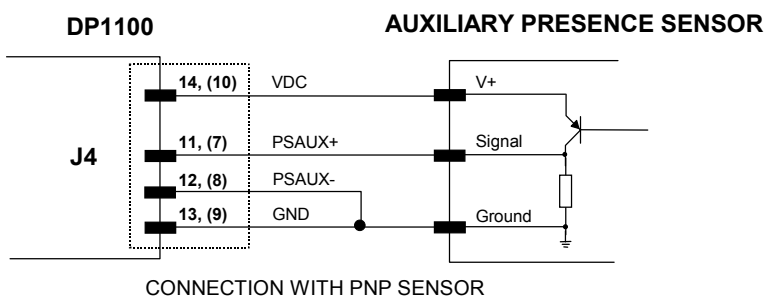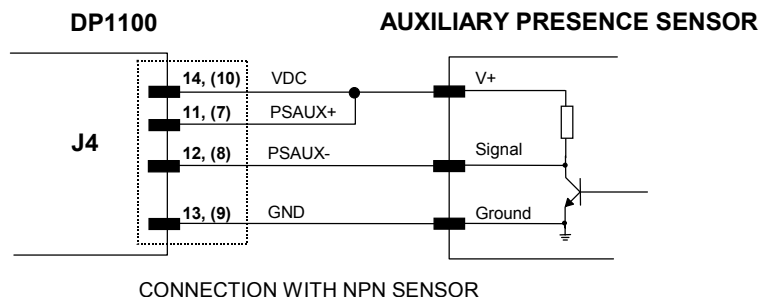

PSAUX+ = PS1AUX+ or (PS2AUX+)
PSAUX- = PS1AUX- or (PS2AUX-)
VDC = VDC1 or (VDC2)
GND = GND1 or (GND2)

Figure 26 - Auxiliary input connections

2.8.2 Outputs

The following pins are present on connector J4 (see Figure 11) of the decoder depending on the model:

Connector J4 for H1 models		
Pin	Name	Function
1	WRONG+	Wrong Read Output (+)
2	WRONG-	Wrong Read Output (-)
3	RIGHT+	Right Read Output (+)
4	RIGHT-	Right Read Output (-)
5	NO READ+	No Read Output (+)
6	NO READ-	No Read Output (-)

Connector J4 for H2 models		
Pin	Name	Function
1	RIGHT2+	Right Read Output (+) for scan head 2
2	RIGHT2-	Right Read Output (-) for scan head 2
3	RIGHT1+	Right Read Output (+) for scan head 1
4	RIGHT1-	Right Read Output (-) for scan head 1
5	NO READ1+	No Read Output (+) for scan head 1
6	NO READ1-	No Read Output (-) for scan head 1

The electrical features are:

VCE max.	40 Vdc
Collector current max.	40 mA continuous; 130 mA pulsed
VCE saturation	1V at 10 mA

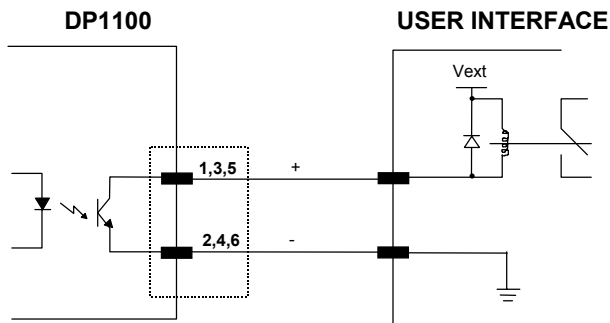


Figure 27 - Open collector output connection

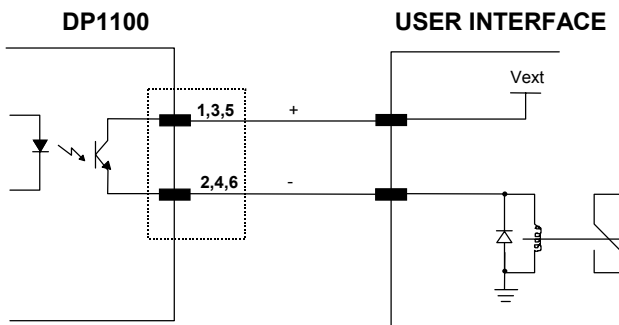


Figure 28 - Open emitter output connection

In the figures above, SIGNAL+ and SIGNAL- are used to refer to the corresponding No Read, Right or Wrong output signals, see table on the previous page. For the description of the DP1100 outputs refer to paragraph 1.3.8.

These outputs are both level or pulse programmable: a 50 ms pulse is generated in the second case. Further programming information is supplied in the section "Output Lines" in the Help On Line of the WinHost utility program.

2.9 TYPICAL LAYOUTS

The DP1100 decoder was specifically designed for industrial applications. A typical use is real time identification of moving objects on conveyors.

The decoder generally activates the scanner(s) when signaled by a photoelectric sensor used as a code presence sensor when an object enters the barcode reader reading zone. See the following figures for example layouts depending on whether H1 or H2 models are used.

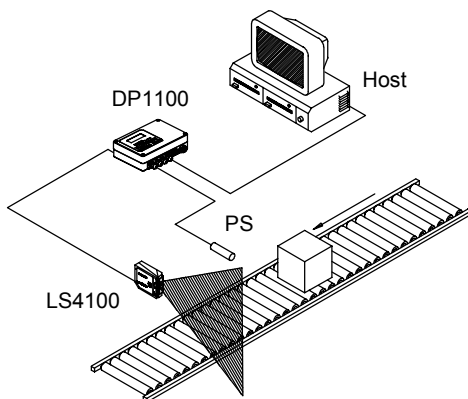


Figure 29 - DP1100 (H1) typical application

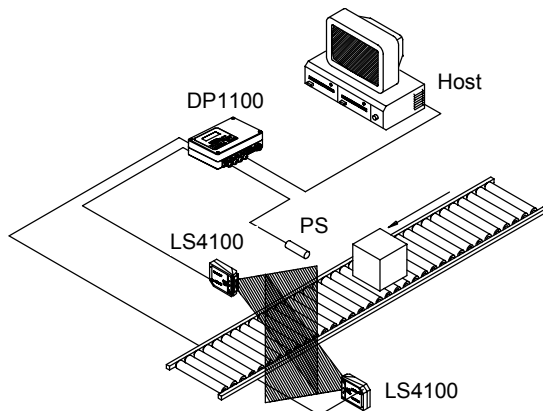


Figure 30 - DP1100 (H2) with 2 scanners in single reading mode

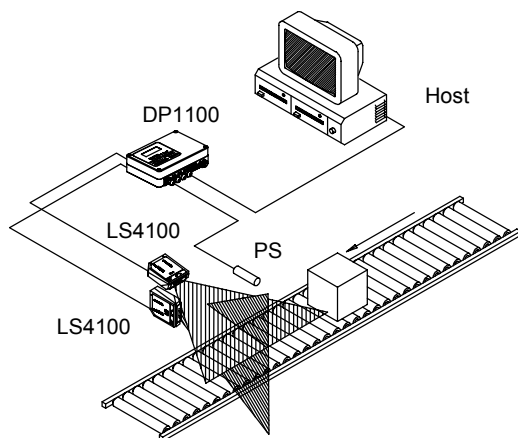


Figure 31 - DP1100 (H2) with 2 scanners in single reading mode

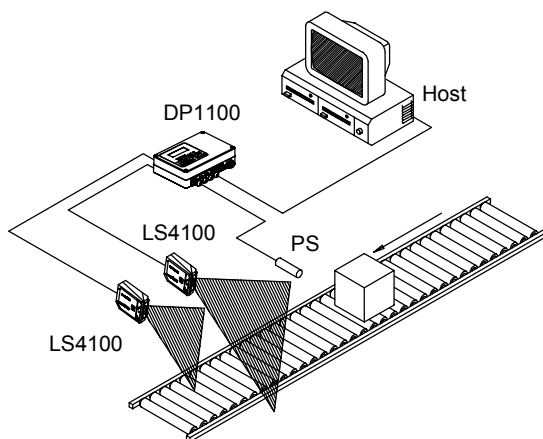


Figure 32 - DP1100 (H2) with 2 scanners in single reading mode

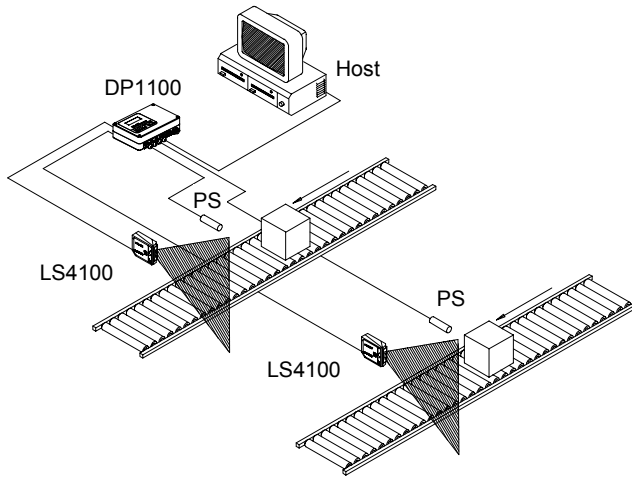


Figure 33 - DP1100 (H2) with 2 scanners in twin reading mode

2.9.1 Pass Through

Pass Through mode allows two or more DP1100s to be connected to a single external serial interface by chaining the Auxiliary and Main interfaces towards the Host. Each DP1100 transmits the messages received by the Auxiliary interface onto the Main interface. All messages will be passed through this chain to the host.

Both H1 and H2 models can be used in this layout, however H2 models must be used in Twin Reading Mode, see Figure 33. See the WinHost Help On-Line for software configuration details.

The reading phase of each DP1100 is independent from the others in Pass Through mode.

Connections for a Pass Through layout are shown in the following figure:

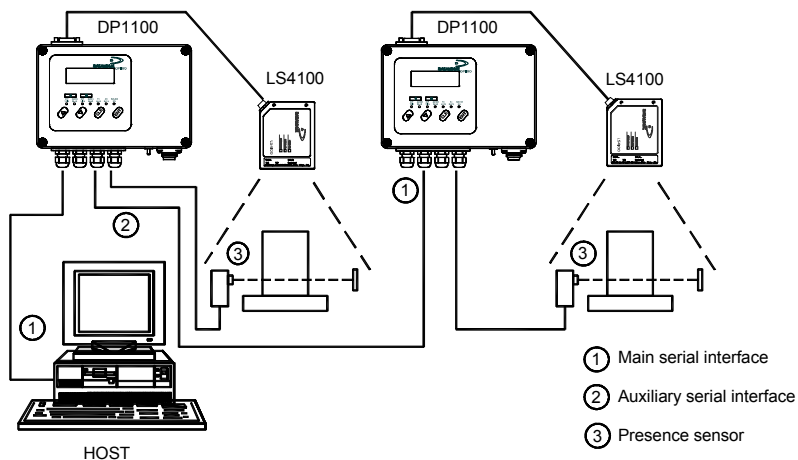


Figure 34 - Pass through layout

2.9.2 Local Echo

For H1 models, in local echo mode data is transmitted on the auxiliary interface as well as on the main interface.

Host Mode programming can be accomplished either through the main interface or the auxiliary interface in local echo mode.

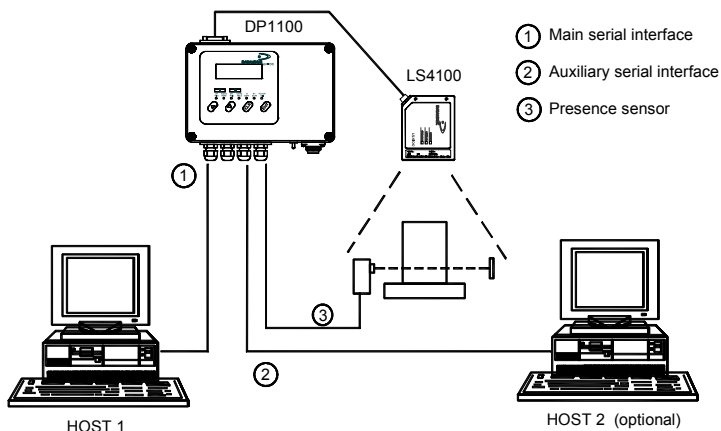


Figure 35 - Local echo layout

2.9.3 Master-Slave (Special Software Versions Only)

Upon request, special versions of the DP1100 can implement a Master-Slave layout for data collection from several scanners to build a multi-sided reading system. There can be one Master and up to 9 Slaves connected together.

The Slave decoders are connected to the main and auxiliary serial interfaces using RS232 only. Each Slave DP1100 transmits the messages received by the auxiliary interface onto the main interface. All messages will be passed through this chain to the Master.

The Master decoder is connected to the Host on the main serial interface. The possible main interface types for the Master decoder are RS232 or RS485. For details see the WinHost Help On Line.

The P.S. signal is unique to the system; there is a single reading phase and a single message from the Master decoder to the Host PC.

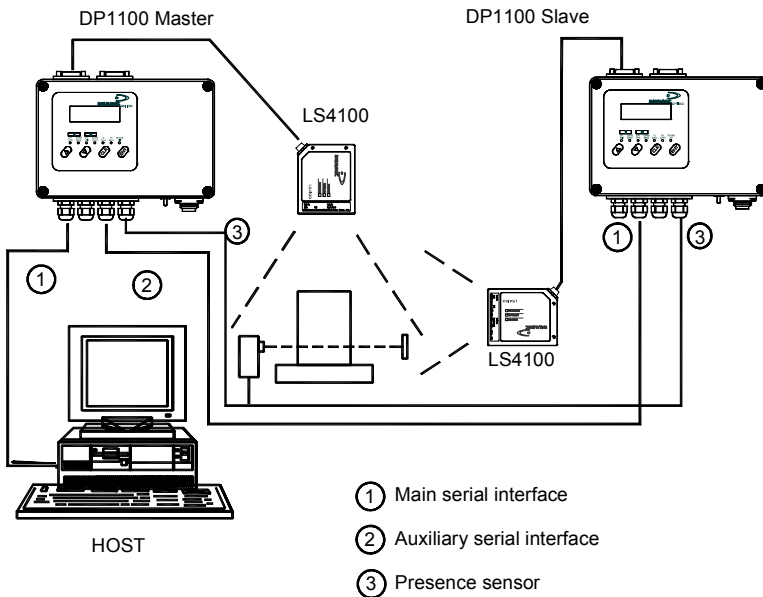


Figure 36 - Master-slave layout

Both H1 and H2 models can be connected in the Master-Slave layout.

3 MAINTENANCE



3.1 REPLACING THE PROTECTION FUSE

All the internal circuits of the DP1100 are protected by a fuse on the input power line.

The decoder must be opened to change the fuse.



WARNING

The decoder must be disconnected from the power supply during this operation.

Refer to paragraph 2.2 to open the decoder.

To replace the protection fuse refer to the following instructions:

- 1) Unscrew the screw on the protection shield indicated in Figure 37, paying attention to the cable which is connected to the electrical ground.
- 2) Remove the protection shield.
- 3) Replace the fuse whose position is shown in Figure 38. Make sure to use the correct value as specified in the protection fuse table below.

PROTECTION FUSE	
230 Vac version	315 mA T
110 Vac version	500 mA T

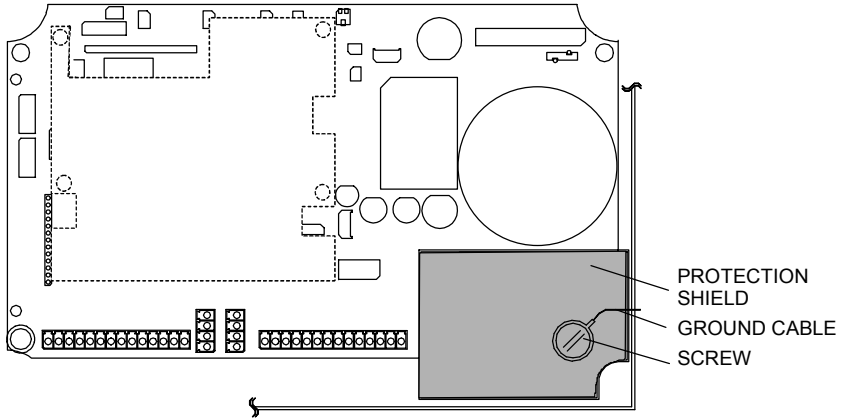


Figure 37 - Protection shield position

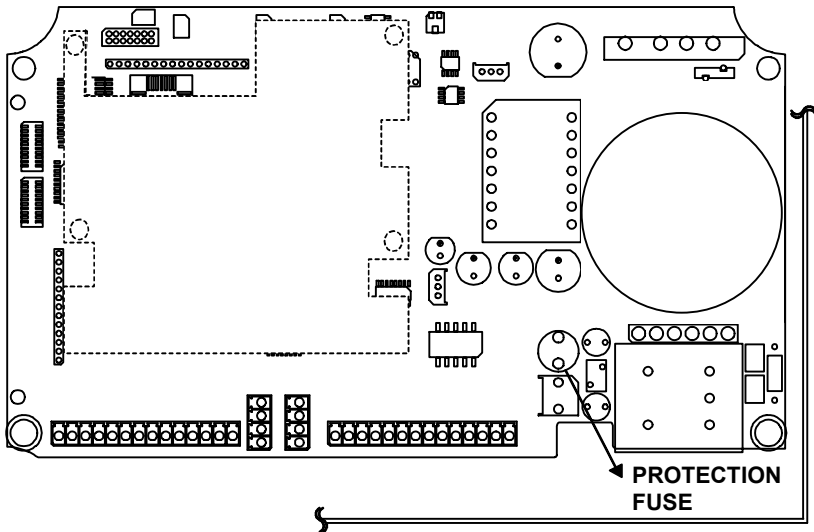


Figure 38 - Fuse position

4 TECHNICAL FEATURES

	DP1100 H1	DP1100 H2
ELECTRICAL FEATURES		
Power		
Supply voltage	230 Vac 50/60Hz ± 20% (184-276V)	
Supply voltage	110 Vac 50/60Hz ± 20% (88-132V)	
Serial Interfaces		
Main	RS232, RS485 Full-Duplex,RS485 Half-Duplex, 20 mA C. L.	
Auxiliary	RS232	
Baud Rates	150 to 19200	
Inputs		
(optocoupled NPN or PNP)	1 presence sensor 1 auxiliary presence sensor	2 presence sensors 2 auxiliary presence sensors
Voltage max.	30 Vdc	
Input current max.	20 mA	
Outputs		
(open emitter open collector)	No Read1 Right Read1 Right Read2	No Read Right Read Wrong Read
VCE max.	40 Vdc	
Collector current max.	40 mA continuous; 130 mA pulsed	
VCE saturation	1V at 10 mA	
USER INTERFACE		
LED indicators	Power On, Data Reception, Data TX, Presence Sensor Active, Barcode Decoded	

SOFTWARE FEATURES	
READABLE CODE SYMBOLOGIES Up to 22 readable barcode symbologies including: <ul style="list-style-type: none"> • Interleaved 2/5 • Code 39 (Standard and Full ASCII) • Codabar • Code 93 (Standard and Full ASCII) • EAN/UPC (including Add-on 2 and Add-on 5) • Code 128 • EAN 128 	
Code Selection	up to six codes during one reading phase
Code Position	can be verified and displayed if necessary
Decoding Safety	can enable multiple good reads of same code
Headers and Terminators	up to four headers and four terminators
Operating Modes	on line, automatic, serial on line, test
Configuration Modes	<ul style="list-style-type: none"> • through menus using WinHost utility • through KEYBOARD MODE • receiving commands from one of the serial ports (HOST MODE)
Parameter Storage	Non-volatile internal EEPROM
ENVIRONMENTAL FEATURES	
Operating temperature (see Note)	0° to +50 °C (+32° to +122 °F)
Storage temperature	-20° to +70 °C (-4° to +158 °F)
Humidity max.	90% non condensing
Vibration resistance	IEC 68-2-6 test FC 1.5 mm; 10 to 55 Hz; 2 hours on each axis
Shock resistance	IEC 68-2-27 test EA 30G; 11 ms; 3 shocks on each axis
PHYSICAL FEATURES	
Mechanical dimensions	240 x 200 x 66 mm (9.44 x 7.87 x 2.59 in)
Weight	about 2.8 Kg. (98.76 oz)

Note: if the barcode reader connected to the DP1100 is used in high temperature environments (over 35 °C), the use of the Beam Shutter is advised (see "Beam Shutter" in the WinHost utility program).

We

DATALOGIC S.p.A.
Via Candini, 2
40012 - Lippo di Calderara
Bologna - Italy

declare under our sole responsibility that the product

DP1100-XXXX, Decoder and all its models


to which this declaration relates is in conformity with the following standards or other normative documents

- | | |
|--------------------------------|---|
| EN 55022, August 1994: | LIMITS AND METHODS OF MEASUREMENTS OF RADIO DISTURBANCE CHARACTERISTICS OF INFORMATION TECHNOLOGY EQUIPMENT (ITE) |
| EN 50082-2, March 1995: | ELECTROMAGNETIC COMPATIBILITY. GENERIC IMMUNITY STANDARD. PART 2: INDUSTRIAL ENVIRONMENT |
| EN 60950, October 1996: | SAFETY OF INFORMATION TECHNOLOGY EQUIPMENT, INCLUDING ELECTRICAL BUSINESS EQUIPMENT |

Following the provision of the Directive(s):

89/336 CEE AND SUCCESSIVE AMENDMENTS, 92/31 CEE; 93/68 CEE; 73/23 CEE

Lippo di Calderara, 23.09.1997

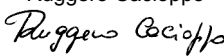Ruggero Cacioppo

Quality Assurance Supervisor