


Network Interface Appendix

Anybus[®]-CompactCom CC-Link

Rev. 1.12

HMS Industrial Networks AB


Germany +49 - 721 - 96472 - 0
Japan +81 - 45 - 478 -5340
Sweden +46 - 35 - 17 29 20
U.S.A +1 - 773 - 404 - 3486


ge-sales@hms-networks.com
jp-sales@hms-networks.com
sales@hms-networks.com
us-sales@hms-networks.com



Table of Contents

Preface	About This Document
	How To Use This Document P-1
	Important User Information P-1
	Related Documents..... P-2
	Document History P-2
	Conventions & Terminology..... P-3
	Support P-3
Chapter 1	About the Anybus-CompactCom CC-Link
	General..... 1-1
	Features..... 1-1
	Fieldbus Conformance Notes 1-1
	Front View 1-2
Chapter 2	Basic Operation
	General Information..... 2-1
	<i>Software Requirements</i> 2-1
	<i>Communication Settings</i> 2-1
	Data Exchange..... 2-2
	<i>Bit Area vs. Word Area</i> 2-2
	<i>Data Sizes</i> 2-2
Chapter 3	Process Data Mapping
	General..... 3-1
	Standard Mapping 3-2
	Advanced Mapping (Optional) 3-3
Chapter 4	CC-Link System Area Implementation
	System Area Modes..... 4-1
	System Area Layout 4-1
	System Area Location..... 4-2
	Error Code Location 4-2
	Diagnostics 4-3

Chapter 5 Anybus Module Objects

General Information.....	5-1
Anybus Object (01h).....	5-2
<i>General Information</i>	5-2
<i>Object Attributes (Instance #0)</i>	5-2
<i>Instance Attributes (Instance #1)</i>	5-2
Diagnostic Object (02h).....	5-3
<i>General Information</i>	5-3
<i>Object Attributes (Instance #0)</i>	5-3
<i>Instance Attributes</i>	5-3
Network Object (03h).....	5-4
<i>General Information</i>	5-4
<i>Object Attributes (Instance #0)</i>	5-4
<i>Instance Attributes (Instance #1)</i>	5-4
Network Configuration Object (04h).....	5-5
<i>General Information</i>	5-5
<i>Object Attributes (Instance #0)</i>	5-5
<i>Instance Attributes (Instance #1, 'Station number')</i>	5-6
<i>Instance Attributes (Instance #2, 'Baud rate')</i>	5-6
<i>Multilingual Strings</i>	5-6
Network CC-Link Object (08h).....	5-7
<i>General Information</i>	5-7
<i>Object Attributes (Instance #0)</i>	5-7
<i>Instance Attributes (Instance #1)</i>	5-7
<i>Command Details: Map_ADI_Specified_Write_Area</i>	5-8
<i>Command Details: Map_ADI_Specified_Read_Area</i>	5-9

Chapter 6 Host Application Objects

General Information.....	6-1
CC-Link Host Object (F7h).....	6-2
<i>General Information</i>	6-2
<i>Object Attributes (Instance #0)</i>	6-2
<i>Instance Attributes (Instance #1)</i>	6-2
<i>Command Details: Initial_Data_Setting_Notification</i>	6-3

Appendix A Implementation Details

SUP-Bit Definition.....	A-1
Anybus Statemachine.....	A-1
Application Watchdog Timeout Handling.....	A-1
CC-Link Handshaking Implementation.....	A-2

Appendix B Exception Information

Appendix C Technical Specification

Protective Earth (PE) Requirements..... C-1

Power Supply C-1

Environmental Specification C-1

EMC Compliance..... C-1

About This Document

How To Use This Document

This document is intended to provide a good understanding of functionality offered by the Anybus-CompactCom CC-Link fieldbus communication module. Only the features that are unique to this product are described in this document, i.e. for general information regarding the Anybus-CompactCom platform, consult the Anybus-CompactCom Hardware and Software Design Guides.

The reader of this document is expected to be familiar with high level software design, and communication systems in general.

For more information, documentation etc., please visit the HMS website, 'www.anybus.com'.

Important User Information

Anybus-CompactCom and the technology used in Anybus-CompactCom is protected by patent, pending patents, copyright and trademark laws under the United States of America and international law.

The data and illustrations found in this document are not binding. We, HMS Industrial Networks AB, reserve the right to modify our products in line with our policy of continuous product development. The information in this document is subject to change without notice and should not be considered as a commitment by HMS Industrial Networks AB. HMS Industrial Networks AB assumes no responsibility for any errors that may appear in this document.

There are many applications of this product. Those responsible for the use of this device must ensure that all the necessary steps have been taken to verify that the application meets all performance and safety requirements including any applicable laws, regulations, codes, and standards.

Anybus® is a registered trademark of HMS Industrial Networks AB. All other trademarks are the property of their respective holders. The examples and illustrations in this document are included solely for illustrative purposes. Because of the many variables and requirements associated with any particular implementation, HMS cannot assume responsibility or liability for actual use based on these examples and illustrations.

Warning:	This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.
ESD Note:	This product contains ESD (Electrostatic Discharge) sensitive parts that may be damaged if ESD control procedures are not followed. Static control precautions are required when handling the product. Failure to observe this may cause damage to the product.

Related Documents

Document	Author
Anybus-CompactCom Software Design Guide	HMS
Anybus-CompactCom Hardware Design Guide	HMS
Anybus-CompactCom Software Driver User Guide	HMS
CC-Link Conformance Test specification (Publication BAP-C0401-012-A)	CLPA
CC-Link Specification (Profile) (publication BAP-05028-E)	CLPA
-	-

Document History

Summary of Recent Changes (1.11... 1.12)

Change	Page(s)
Corrected power consumption	C-1
Misc. minor corrections	-
-	-

Revision List

[illegible]

Conventions & Terminology

The following conventions are used throughout this document:

- Numbered lists provide sequential steps
- Bulleted lists provide information, not procedural steps
- The terms ‘Anybus’ or ‘module’ is used when referring to the Anybus-CompactCom module.
- The terms ‘host’ or ‘host application’ is used when referring to the hardware and software that hosts the Anybus-CompactCom module.
- Hexadecimal values are written in the format NNNNh, where NNNN is the hexadecimal value.

Support

HMS Sweden (Head Office)

E-mail:	support@hms-networks.com
Phone:	+46 (0) 35 - 17 29 20
Fax:	+46 (0) 35 - 17 29 09
Online:	www.anybus.com

HMS America

E-mail:	us-support@hms-networks.com
Phone:	+1-773-404-2271
Toll Free:	888-8-Anybus
Fax:	+1-773-404-1797
Online:	www.anybus.com

HMS Germany

E-mail:	ge-support@hms-networks.com
Phone:	+49-721-96472-0
Fax:	+49-721-964-7210
Online:	www.anybus.com

HMS Japan

E-mail:	jp-support@hms-networks.com
Phone:	+81-45-478-5340
Fax:	+81-45-476-0315
Online:	www.anybus.com

About the Anybus-CompactCom CC-Link

General

The Anybus-CompactCom CC-Link communication module provides instant CC-Link slave functionality via the patented Anybus-CompactCom host interface. Any device that supports this standard can take advantage of the features offered by the module, allowing seamless network integration regardless of network type.

This product conforms to all aspects of the host interface for Active modules defined in the Anybus-CompactCom Hardware- and Software Design Guides, making it fully interchangeable with any other device following that specification. Generally, no additional network related software support is needed, however in order to take advantage of advanced network specific functionality, a certain degree of dedicated software support may be necessary.

Features

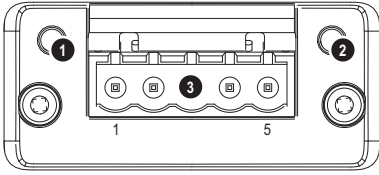
- **CC-Link Remote Device**
- **Up to 128 I/O (bit) points and 16 words (16 bit) of data (CC-Link v.1)**
- **Up to 896 I/O (bit) points and 128 words (16 bit) of data (CC-Link v.2)¹**
- **Automatic CC-Link System Area handshaking (optional)**
- **Possibility to customize Vendor Code, Model Code and Version via application interface**
- **Baudrate and Station Number configuration via switches or application interface**
- **Galvanically isolated bus electronics**

Fieldbus Conformance Notes

- The Anybus-CompactCom CC-Link has been tested standalone and found to comply with the CC-Link Conformance Test specification, publication BAP-C0401-012-A. The end product will however need to be re-certified in order to comply with CC-Link certification policies.
- The recommendations stated in the Anybus-CompactCom Software Design Guide regarding the Network Configuration Object (04h) must be followed to ensure fieldbus conformity.
- The application alone is responsible for maintaining compatibility with the profiles defined in the CC-Link Specification (Profile), publication BAP-05028-E. This documentation is available free of charge to all registered CLPA members. To sign up as a member, please contact the CLPA (www.cc-link.org).

1. The host interface still limits the total amount of data to 256 bytes in each direction.

Front View

#	Item	
1	Run LED	
2	Error LED	
3	CC-Link Interface	

Run LED

State	Meaning
Off	- No network participation, timeout status (no power)
Green	- Participating, normal operation
Red	- Major fault (FATAL error)

Error LED

State	Meaning
Off	- No error detected (no power)
Red	- Major fault (Exception or FATAL event)
Red, flickering	- CRC error (temporary flickering)
Red, flashing	- Station Number or Baud rate has changed since startup (flashing)

CC-Link Interface

Pin	Signal	Comment
1	DA	Positive RS485 RxD/TxD
2	DB	Negative RS485 RxD/TxD
3	DG	Signal Ground
4	SLD	Cable Shield
5	FG	Protective Earth

Basic Operation

General Information

Software Requirements

No additional network support code needs to be written in order to support the Anybus-CompactCom CC-Link, however due to the nature of the CC-Link networking system certain restrictions must be taken into account:

- No acyclic data exchange
- ADIs must be mapped as Process Data in order to be represented on the network
- ADI Names, types and similar attributes cannot be accessed from the network.
- No support for network reset requests
- Up to 5 diagnostic instances (see 5-3 “Diagnostic Object (02h)”) can be created by the host application during normal operation. An additional 6th instance may be created in event of a major fault.

For in depth information regarding the Anybus-CompactCom software interface, consult the general Anybus-CompactCom Software Design Guide.

Communication Settings

Network related communication which can be accessed by the end user are grouped in the Network Configuration Object (04h).

In the case of CC-Link, this includes:

- **Station Number**
On CC-Link, each device on the network must be assigned a unique Station Number. The highest possible Station Number depends on the number of occupied stations.
- **Baud rate**
The module supports all common CC-Link baudrates up to 10Mbps.

Data Exchange

Bit Area vs. Word Area

On CC-Link, data is divided into two categories as follows:

- **Bit Area**

Data is accessed on a bit-by-bit basis. Data is commonly referred to as RX #nn (Slave->Master) and RY #nn (Master->Slave) where 'nn' represents an addressable point (i.e. a single bit) in the Bit Area.

- **Word Area**

Data is accessed as 16-bit words. Data is commonly referred to as RWr #nn (Slave->Master) and RWw #nn (Master->Slave) where 'nn' represents an addressable point (i.e. a word) in the Word Area.

Data Sizes

By default, the module automatically calculates the required number of occupied stations based on the mapped Process Data. The following data sizes are possible.

Occupied Stations	Bit Points	Word Points	Total (Bit + Word, in bytes)
1	32 bits	4 words	12
2	64 bits	8 words	24
3	96 bits	12 words	36
4	128 bits	16 words	48

It is possible to customize the implementation and use larger data sizes by implementing the 'Network Settings'-attribute (#4) in the CC-Link Object (F7h). In such case, the following sizes are possible:

Occupied Stations	1 Extension Cycle		2 Extension Cycles		4 Extension Cycles		8 Extension Cycles	
	Points	Total	Points	Total	Points	Total	Points	Total
1	32 bits	12 bytes	32 bits	20 bytes	64 bits	40 bytes	128 bits	80 bytes
	4 words		8 words		16 words		32 words	
2	64 bits	24 bytes	96 bits	44 bytes	192 bits	88 bytes	384 bits	176 bytes
	8 words		16 words		32 words		64 words	
3	96 bits	36 bytes	160 bits	68 bytes	320 bits	136 bytes	640 bits	272 bytes
	12 words		24 words		48 words		96 words	
4	128 bits	48 bytes	224 bits	92 bytes	448 bits	184 bytes	896 bits	368 bytes
	16 words		32 words		64 words		128 words	

Note 1: Although as much as 368 bytes may be exchanged physically on the bus, the host interface still limits the total amount of data to 256 bytes in each direction.

Note 2: On CC-Link, certain parts of the Bit and Word data may be reserved and should not be used for data exchange. For more information, see 4-1 "CC-Link System Area Implementation".

Process Data Mapping

General

The module features two different mapping schemes for the Process Data.

- **Standard Mapping**

Process Data is mapped using the standard mapping commands (Map_ADI_Write_Area & Map_ADI_Read_Area).

See also...

- 3-2 “Standard Mapping”

- **Advanced Mapping (Optional)**

To be able to fully exploit the functionality offered on CC-Link, an additional network-specific mapping method has been implemented. This is realised through the use of two network-specific commands, Map_ADI_Specified_Write_Area and Map_ADI_Specified_Read_Area.

See also...

- 3-3 “Advanced Mapping (Optional)”

See also...

- 4-1 “CC-Link System Area Implementation”
- 5-4 “Network Object (03h)”
- 5-8 “Command Details: Map_ADI_Specified_Write_Area”
- 5-9 “Command Details: Map_ADI_Specified_Read_Area”

Standard Mapping

This scheme is used when the host application uses the standard mapping commands:

- Map_ADI_Write_Area maps data to the RX (bit) and RWr (word) areas.
- Map_ADI_Read_Area maps data to the RY (bit) and RWw (word) areas.
- ADIs are mapped to consecutive locations in the respective areas in the same order as the mapping commands are issued.
- ADIs of BOOL-type are mapped to the first unused bit of the corresponding Bit Area.
- Non-BOOL ADIs are mapped to consecutive words beginning at the least significant byte of the first unused word of the corresponding Word Area. Additional rules apply as follows:
 - ADIs are always treated as single entities, even if they consist of multiple elements
 - ADIs of odd total size are padded to even length (i.e. the most significant byte of the last mapped word will be empty).

Example

In this example, Map_ADI_Read_Area is issued 8 times, labelled A...H:

Command	Data Type	No. of Elements
A	BOOL	1
B	UINT8	1
C	BOOL	9
D	UINT16	1
E	UINT8	3
F	BOOL	1
G	SINT8	2
H	UINT32	3

Resulting Bit Area Contents:

Point	Contents							
RY #7... 0	C[6]	C[5]	C[4]	C[3]	C[2]	C[1]	C[0]	A
RY #15... 8	-	-	-	-	-	F	C[8]	C[7]

Resulting Word Area Contents:

Point	Contents (LSB)	Contents (MSB)
RWw #0	B	-
RWw #1	D	D
RWw #2	E[0]	E[1]
RWw #3	E[2]	-
RWw #4	G[0]	G[1]
RWw #5	H[0:LSW]	H[0:LSW]
RWw #6	H[0:MSW]	H[0:MSW]
RWw #7	H[1:LSW]	H[1:LSW]
RWw #8	H[1:MSW]	H[1:MSW]
RWw #9	H[2:LSW]	H[2:LSW]
RWw #10	H[2:MSW]	H[2:MSW]

Advanced Mapping (Optional)

This scheme is used when the host application uses the network-specific mapping commands:

- Map_ADI_Specified_Write_Area maps data to the RX (bit) and RWr (word) areas.
- Map_ADI_Specified_Read_Area maps data to the RY (bit) and RWw (word) areas.
- When mapping to the Word Area, each ADI will occupy at least one 16-bit word. The bits are mapped from the least significant bit towards the most significant bit.
- ADIs of BOOL-type can be mapped to both the Bit and Word Area
 - Arrays of BOOL are mapped to consecutive bits
- Non-BOOL ADIs can be mapped to both the Bit and Word Areas under the following conditions:
 - ADIs are always treated as single entities, even if they consist of multiple elements
 - When mapping to the Bit Area, each ADI must start on an even 8-bit boundary.

Example

In this example, Map_ADI_Specified_Read_Area is issued 5 times, labelled A...E:

Command	Data Type	No. of Elements	Target Area	Target Offset
A	UINT16	1	0 (Bit Area)	8
B	BOOL	9	1 (Word Area)	2
C	BOOL	2	0 (Bit Area)	5
D	SINT16	1	1 (Word Area)	8
E	SINT8	3	1 (Word Area)	3

Resulting Bit Area Contents:

Point	Contents							
RY #7... 0	-	C[1]	C[0]	-	-	-	-	-
RY #15... 8	A:LSB							
RY #23... 16	A:MSB							

Resulting Word Area Contents:

[illegible]

CC-Link System Area Implementation

System Area Modes

An essential part of the CC-Link communication is the CC-Link System Area. This area holds various status- and diagnostic flags, and can either be handled automatically by the Anybus module (default) or by the host application.

- **System Area handled by Anybus (Default)**

All flags in the System Area are handled automatically by the module, unless this functionality has been explicitly disabled in the ‘System Area Handler’-attribute (#5) in the CC-Link Object (F7).

- **System Area handled by Host Application**

If the ‘System Area Handler’-attribute (#5) has been set to -1 (disabled), the host application alone is responsible for handling the CC -Link status flags in accordance with one of the profiles defined in the CC-Link specification. To achieve this, the host application must map one or several ADIs to the corresponding location(s) in the CC-Link memory map.

System Area Layout

Note: This section is only relevant when the System Area is handled automatically by the module.

Slave -> Master		Master -> Slave	
Bit Offset	Contents	Bit Offset	Contents
0	(reserved)	0	(reserved)
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8	Initial Data Processing Request	8	Initial Data Processing Complete
9	Initial Data Setting Complete	9	Initial Data Setting Request
10	Error Status	10	Error Reset Request
11	Remote READY	11	(reserved)
12	(reserved)	12	
13		13	
14		14	
15		15	

The various flags listed in the table above are handled as described in A-2 “CC-Link Handshaking Implementation”.

See also...

- 4-2 “System Area Location”
- 4-3 “Diagnostics”
- A-2 “CC-Link Handshaking Implementation”

System Area Location

Note: This section is only relevant when the System Area is handled automatically by the module.

The default location of the System Area is at the very end of the Bit Area as follows:

Point	Contents	Point	Contents
RX #0	User area (holds Write Process Data)	RY #0	User area (holds Read Process Data)
RX #1		RY #1	
...		...	
RX #Q-18		RY #Q-18	
RX #Q-17		RY #Q-17	
RX #Q-16	(Reserved for CC-Link System Area)	RY #Q-16	(Reserved for CC-Link System Area)
RX #Q-15		RY #Q-15	
...		...	
RX #Q-2		RY #Q-2	
RX #Q-1		RY #Q-1	

(The table above illustrates how data is represented as seen from the CC-Link master. ‘Q’ represents the number of addressable points in the Bit Area.)

It is possible to change the location of the System Area by implementing the ‘System Area Handler’-attribute (#5) in the CC-Link Object (F7h). It is also possible to disable it altogether by setting this attribute to -1. In such case, the host application is responsible for handling the CC-Link communication in consistency with one of the profiles defined in the CC-Link Specification (profile).

See also...

- 3-2 “Standard Mapping”
- A-2 “CC-Link Handshaking Implementation”

Error Code Location

Note: This section is only relevant when the System Area is handled automatically by the module.

If the ‘Model Code’-attribute (#3) in the CC-Link Object (F7h) equals 4Eh (‘Anybus’, default), the last word of the Word Area is reserved for diagnostic functionality as follows:

Point	Contents	Point	Contents
RWr #0	User area (holds Write Process Data)	RWw #0	User area (holds Read process Data)
RWr #1		RWw #1	
...		...	
RWr #Z-2		RWw #Z-2	
RWr #Z-1	(Error Code)	RWw #Z-1	

(The table above illustrates how data is represented as seen from the CC-Link master. ‘Z’ represents the number of addressable points in the Word Area.)

Note that disabling the System Area (i.e. by setting the ‘System Area Handler’-attribute (#5) in the CC-Link Object (F7h) to -1) also disables the Error Code word.

See also...

- 3-2 “Standard Mapping”
- 4-2 “System Area Location”

Diagnostics

Note: This section is only relevant when the System Area is handled automatically by the module.

As mentioned previously, the module supports up to 5 diagnostic entries during normal conditions, plus an additional 6th entry in case of a major unrecoverable event.

Diagnostics are represented through the 'Error Status'-flag, the 'Remote READY'-flag, and the 'Error Code'-word.

- **'Error Status'-flag**

This flag reflects the state of the Diagnostic Object as follow:

- 1: Diagnostic events exists¹, see 'Error Code'-word below
- 0: No diagnostic events exists - *or* - 'Error Reset Request'-flag high

See also...

- 4-1 "System Area Modes"
- A-2 "CC-Link Handshaking Implementation"

- **'Error Code'-word**

This word holds additional diagnostic information as follows:

- High byte: Severity Code (diagnostic instance attribute #1)
- Low byte: Event Code (diagnostic instance attribute#2)

The module updates this word on the rising edge of 'Error Status'. With each update, the module cycles through the available events, which means that the master can gather information from several diagnostic events by toggling the 'Error Reset Request'-flag accordingly.

Events tagged with 'Major' severity are prioritized by the module, which means that if present, only those particular events will be reported to the network. If no 'Major' events are present, the module will report the 'Minor' events (when applicable).

Note: This word only exists if the 'Model Code'-attribute (#3) in the CC-Link Object (F7h) is set to 4Eh (default). If not, this word will be used for normal data exchange.

See also...

- 4-1 "System Area Modes"
- A-2 "CC-Link Handshaking Implementation"

- **'Remote READY'-flag**

- 1: Normal operation
- 0: Diagnostic event with 'Major' severity exists² - *or* - 'Initial Data Setting Request'-flag high

See also...

- 4-1 "System Area Modes"
- A-2 "CC-Link Handshaking Implementation"

1. The flag stays high until the master has acknowledged the event through the 'Error Reset Request'-flag.
 2. Normal behaviour is resumed when the event has been resolved (i.e. when the host application removes the corresponding diagnostic instance) - and - the master has acknowledged the event through the 'Error Reset Request'-flag (see also Error Status and Error Code above)

Anybus Module Objects

General Information

This chapter specifies the Anybus Module Object implementation and how they correspond to the functionality in the Anybus-CompactCom CC-Link.

The following Anybus Module Objects are implemented:

- 5-2 “Anybus Object (01h)”
- 5-3 “Diagnostic Object (02h)”
- 5-4 “Network Object (03h)”
- 5-5 “Network Configuration Object (04h)”
- 5-7 “Network CC-Link Object (08h)”

Anybus Object (01h)

General Information

Object Description

This object groups common Anybus information, and is described thoroughly in the general Anybus-CompactCom Software Design Guide.

Supported Commands

Object: Get_Attribute
 Instance: Get_Attribute
 Set_Attribute
 Get_Enum_String

Object Attributes (Instance #0)

#	Name	Access	Data Type	Value
1	Name	Get	Array of CHAR	"Anybus"
2	Revision	Get	UINT8	03h
3	Number of instances	Get	UINT16	0001h
4	Highest instance no.	Get	UINT16	0001h

Instance Attributes (Instance #1)

#	Name	Access	Type	Value
1	Module type	Get	UINT16	0401h (Standard Anybus-CompactCom)
2	Firmware version	Get	struct of: UINT8 Major UINT8 Minor UINT8 Build	(consult the general Anybus-CompactCom Software Design Guide for further information)
3	Serial number	Get	UINT32	
4	Application watchdog timeout	Get/Set	UINT16	
5	Setup complete	Get/Set	BOOL	
6	Exception Code	Get	ENUM	
8	Error counters	Get	struct of: UINT16 DC UINT16 DR UINT16 SE	
9	Language	Get/Set	ENUM	

Diagnostic Object (02h)

General Information

Object Description

This object provides a standardised way of handling host application events & diagnostics, and is thoroughly described in the general Anybus-CompactCom Software Design Guide.

In the case of CC-Link, diagnostics can be represented through the CC-Link System Area flags, and through a dedicated register in the Word Area.

See also...

- 4-1 “System Area Modes”
- 4-1 “System Area Layout”
- 4-3 “Diagnostics”

Supported Commands

Object: Get_Attribute
 Create
 Delete

Instance: Get_Attribute

Object Attributes (Instance #0)

#	Name	Access	Data Type	Value
1	Name	Get	Array of CHAR	'Diagnostic'
2	Revision	Get	UINT8	01h
3	Number of instances	Get	UINT16	See general Anybus-CompactCom Software Design Guide
4	Highest instance no.	Get	UINT16	
11	Max no. of instances	Get	UINT16	5+1

Instance Attributes

#	Name	Access	Type	Value
1	Severity	Get	UINT8	See general Anybus-CompactCom Software Design Guide
2	Event Code	Get	UINT8	

Network Object (03h)

General Information

Object Description

For more information regarding this object, consult the general Anybus-CompactCom Software Design Guide.

See also...

- 5-7 “Network CC-Link Object (08h)”

Supported Commands

Object:	Get_Attribute
Instance:	Get_Attribute Set_Attribute Get_Enum_String Map_ADI_Write_Area Map_ADI_Read_Area

Object Attributes (Instance #0)

#	Name	Access	Data Type	Value
1	Name	Get	Array of CHAR	“Network”
2	Revision	Get	UINT8	02h
3	Number of instances	Get	UINT16	0001h
4	Highest instance no.	Get	UINT16	0001h

Instance Attributes (Instance #1)

#	Name	Access	Type	Value
1	Network type	Get	UINT16	0090h
2	Network type string	Get	Array of CHAR	‘CC-Link’
3	Data format	Get	ENUM	00h (LSB first)
4	Parameter data support	Get	BOOL	False
5	Write process data size	Get	UINT16	Current write process data size (in bytes) Updated on each successful Map_ADI_Write_Area ^a and Map_Specified_ADI_Write_Area ^b
6	Read process data size	Get	UINT16	Current read process data size (in bytes) Updated on each successful Map_ADI_Read_Area ^a and Map_Specified_ADI_Read_Area ^c
7	Exception Information	Get	UINT8	See B-1 “Exception Information”

a. Consult the general Anybus-CompactCom Software Design Guide for further information.

b. See 5-8 “Command Details: Map_ADI_Specified_Write_Area”

c. See 5-9 “Command Details: Map_ADI_Specified_Read_Area”

Network Configuration Object (04h)

General Information

Object Description

This object holds network specific configuration parameters that may be set by the end user. A reset command (factory default) issued towards this object will result in all instances being set to their default values.

See also...

- 2-1 “Communication Settings”
- 6-2 “CC-Link Host Object (F7h)”

Note: In order to ensure fieldbus conformance, the recommendations stated in the Anybus-Compact-Com Software Design Guide regarding this object must be followed.

Supported Commands

Object:	Get_Attribute Reset
Instance:	Get_Attribute Set_Attribute Get_Enum_String

Object Attributes (Instance #0)

#	Name	Access	Data Type	Value
1	Name	Get	Array of CHAR	'Network configuration'
2	Revision	Get	UINT8	01h
3	Number of instances	Get	UINT16	0002h
4	Highest instance no.	Get	UINT16	0002h

Instance Attributes (Instance #1, 'Station number')

This instance holds the actual CC-Link Station Number.

#	Name	Access	Type	Description
1	Name ^a	Get	Array of CHAR	'Station number'
2	Data type	Get	UINT8	04h (= UINT8)
3	Number of elements	Get	UINT8	01h (one element)
4	Descriptor	Get	UINT8	07h (get/set/shared access)
5	Value	Get/Set	UINT8	<p><u>Value:</u> <u>Setting:</u></p> <p>0: (not valid)</p> <p>1... 64: Station Number (see note)</p> <p>>64: (not valid)</p> <p>Notes: The sum of the Station Number and the Number of Occupied Stations may not exceed 65.</p>

a. Multilingual, see 5-6 "Multilingual Strings".

Instance Attributes (Instance #2, 'Baud rate')

This instance holds the actual CC-Link data rate.

#	Name	Access	Type	Description
1	Name ^a	Get	Array of CHAR	'Baud rate'
2	Data type	Get	UINT8	08h (= ENUM)
3	Number of elements	Get	UINT8	01h (one element)
4	Descriptor	Get	UINT8	07h (get/set/shared access)
5	Value	Get/Set	UINT8	<p><u>Value:</u> <u>Speed/String:</u></p> <p>0: '156 kbps'</p> <p>1: '625 kbps'</p> <p>2: '2.5 Mbps'</p> <p>3: '5 Mbps'</p> <p>4: '10 Mbps'</p> <p>other: (not valid)</p>

a. Multilingual, see 5-6 "Multilingual Strings".

Multilingual Strings

The instance names in this object are multilingual and are translated based on the current language settings as follows:

Instance	English	German	Spanish	Italian	French
1	Station number	Geräteadresse	Direcc nodo	Indirizzo	Adresse
2	Baud rate	Datenrate	Veloc transf	Velocità dati	Vitesse

Network CC-Link Object (08h)

General Information

Object Description

-

Supported Commands

Object: Get_Attribute

Instance: Get_Attribute
 Map_ADI_Specified_Write_Area
 (see 5-8 “Command Details: Map_ADI_Specified_Write_Area”)
 Map_ADI_Specified_Read_Area
 (see 5-9 “Command Details: Map_ADI_Specified_Read_Area”)

Object Attributes (Instance #0)

#	Name	Access	Data Type	Value
1	Name	Get	Array of CHAR	“Network CC-Link”
2	Revision	Get	UINT8	01h
3	Number of instances	Get	UINT16	0001h
4	Highest instance no.	Get	UINT16	0001h

Instance Attributes (Instance #1)

#	Name	Access	Type	Value										
1	Network Settings ^a	Get	Struct of: UINT8 UINT8 UINT8	Current network settings: - CC-Link Version; 01h = v1.10, 02h = v2.0 - Number of Occupied Stations - Number of extension cycles										
2	System Area Handler ^a	Get	SINT16	System Area location (or -1 in case the system area is handled by the host application)										
3	Error Code Position ^a	Get	SINT8	Location of the 'Error Code'-word in the Anybus memory map (or -1 in case the system area is handled by the host application, or if module code is unequal to 4Eh ('Anybus'))										
4	Last Mapping Info	Get	Struct of:	-										
			UINT8 (Area)	Target Area for the latest ADI mapping <table><tr><td><u>Value:</u></td><td><u>Area:</u></td></tr><tr><td>00h</td><td>Write Bit Area (RX #nn)</td></tr><tr><td>01h</td><td>Write Word Area (RWr #nn)</td></tr><tr><td>02h</td><td>Read Bit Area (RY #nn)</td></tr><tr><td>03h</td><td>Read Word Area (RWw #nn)</td></tr></table>	<u>Value:</u>	<u>Area:</u>	00h	Write Bit Area (RX #nn)	01h	Write Word Area (RWr #nn)	02h	Read Bit Area (RY #nn)	03h	Read Word Area (RWw #nn)
			<u>Value:</u>	<u>Area:</u>										
			00h	Write Bit Area (RX #nn)										
01h	Write Word Area (RWr #nn)													
02h	Read Bit Area (RY #nn)													
03h	Read Word Area (RWw #nn)													
UINT16 (Starting Point)	Point number (nn) in the CC-Link memory map where the latest mapping was placed													
UINT16 (Points)	No. of points mapped by the latest mapping command													

a. These attributes are calculated automatically by the module unless the host application has specified other values in the CC-Link Object. The attribute values are valid from the first transition to WAIT_PROCESS, and can be used to establish the location of the CC-Link System Area / Error Code during development etc.

Command Details: Map_ADI_Specified_Write_Area

Details

Command Code: 10h

Valid for: Object Instance

Description

This command is functionally equivalent to Map_ADI_Write_Area, with the exception of two extra parameters with CC-Link specific meaning. These extra parameters specify where the data shall be located in the CC-Link address map. Mixed calls to Map_ADI_Specified_Write_Area and Map_ADI_Write_Area is not permitted.

- **Command details:**

Field	Contents
CmdExt[0]	(See specification for Map_ADI_Write_Area)
CmdExt[1]	
Msg_Data[0]	
Msg_Data[1]	
Msg_Data[2]	
Msg_Data[3]	
Msg_Data[4]	CC-Link Area; 00h = Bit Area, 01h = Word Area
Msg_Data[5]	Offset within the area (low byte)
Msg_Data[6]	Offset within the area (high byte)

- **Response details (Success):**

Field	Contents
Msg_Data[0]	Offset of the mapped ADI from the start of the Write Process Data.

- **Response details (Error):**

Error	Contents																		
Object Specific Error	Object specific error, see Msg_Data[1] for details: <table> <tr> <td><u>Value:</u></td><td><u>Error:</u></td></tr> <tr> <td>01h</td><td>Invalid ADI data type</td></tr> <tr> <td>02h</td><td>Invalid number of elements</td></tr> <tr> <td>03h</td><td>Invalid total size</td></tr> <tr> <td>04h</td><td>Invalid order number</td></tr> <tr> <td>05h</td><td>Invalid mapping command sequence</td></tr> <tr> <td>06h</td><td>Invalid CC-Link Area</td></tr> <tr> <td>07h</td><td>Invalid offset</td></tr> <tr> <td>08h</td><td>Overlap with other data on bus</td></tr> </table>	<u>Value:</u>	<u>Error:</u>	01h	Invalid ADI data type	02h	Invalid number of elements	03h	Invalid total size	04h	Invalid order number	05h	Invalid mapping command sequence	06h	Invalid CC-Link Area	07h	Invalid offset	08h	Overlap with other data on bus
<u>Value:</u>	<u>Error:</u>																		
01h	Invalid ADI data type																		
02h	Invalid number of elements																		
03h	Invalid total size																		
04h	Invalid order number																		
05h	Invalid mapping command sequence																		
06h	Invalid CC-Link Area																		
07h	Invalid offset																		
08h	Overlap with other data on bus																		

See also...

- 5-4 “Network Object (03h)”
- Map_ADI_Write(consult the Anybus-CompactCom Software Design Guide)

Command Details: Map_ADI_Specified_Read_Area

Details

Command Code: 11h

Valid for: Object Instance

Description

This command is functionally equivalent to Map_ADI_Read_Area, with the exception of two extra parameters with CC-Link specific meaning. These extra parameters specify where the data shall be located in the CC-Link address map. Mixed calls to Map_ADI_Specified_Read_Area and Map_ADI_Read_Area is not permitted.

- **Command details:**

Field	Contents
CmdExt[0]	(See specification for Map_ADI_Read_Area)
CmdExt[1]	
Msg_Data[0]	
Msg_Data[1]	
Msg_Data[2]	
Msg_Data[3]	
Msg_Data[4]	CC-Link Area; 00h = Bit Area, 01h = Word Area
Msg_Data[5]	Offset within the area (low byte)
Msg_Data[6]	Offset within the area (high byte)

- **Response details (Success):**

Field	Contents
Msg_Data[0]	Offset of the mapped ADI from the start of the Read Process Data.

- **Response details (Error):**

Error	Contents																		
Object Specific Error	Object specific error, see Msg_Data[1] for details: <table> <tr> <td><u>Value:</u></td><td><u>Error:</u></td></tr> <tr> <td>01h</td><td>Invalid ADI data type</td></tr> <tr> <td>02h</td><td>Invalid number of elements</td></tr> <tr> <td>03h</td><td>Invalid total size</td></tr> <tr> <td>04h</td><td>Invalid order number</td></tr> <tr> <td>05h</td><td>Invalid mapping command sequence</td></tr> <tr> <td>06h</td><td>Invalid CC-Link Area</td></tr> <tr> <td>07h</td><td>Invalid offset</td></tr> <tr> <td>08h</td><td>Overlap with other data on bus</td></tr> </table>	<u>Value:</u>	<u>Error:</u>	01h	Invalid ADI data type	02h	Invalid number of elements	03h	Invalid total size	04h	Invalid order number	05h	Invalid mapping command sequence	06h	Invalid CC-Link Area	07h	Invalid offset	08h	Overlap with other data on bus
<u>Value:</u>	<u>Error:</u>																		
01h	Invalid ADI data type																		
02h	Invalid number of elements																		
03h	Invalid total size																		
04h	Invalid order number																		
05h	Invalid mapping command sequence																		
06h	Invalid CC-Link Area																		
07h	Invalid offset																		
08h	Overlap with other data on bus																		

See also...

- 5-4 “Network Object (03h)”
- Map_ADI_Read (consult the Anybus-CompactCom Software Design Guide)

Host Application Objects

General Information

This chapter specifies the host application object implementation in the module. The objects listed here may optionally be implemented within the host application firmware to expand the CC-Link implementation.

Standard Objects:

- Application Object (see Anybus-CompactCom Software Design Guide)
- Application Data Object (see Anybus-CompactCom Software Design Guide)

Network Specific Objects:

- 6-2 “CC-Link Host Object (F7h)”

CC-Link Host Object (F7h)

General Information

Object Description

This object implements CC-Link specific features in the host application.

Supported Commands

Object: Get Attribute
 Initial_Data_Setting_Notification
 (see 6-3 “Command Details: Initial_Data_Setting_Notification”)

Instance: Get Attribute

Object Attributes (Instance #0)

#	Name	Access	Data Type	Value
1	Name	Get	Array of CHAR	'CC-Link'
2	Revision	Get	UINT8	01h
3	Number of instances	Get	UINT16	0001h
4	Highest instance no.	Get	UINT16	0001h

Instance Attributes (Instance #1)

#	Name	Access	Type	Default Value ^a	Comment
1	Vendor Code	Get	UINT16	0212h ('HMS')	Assigned by the CLPA
2	SW Version	Get	UINT8	(Anybus firmware release no.)	Valid settings range from 1 to 3Fh.
3	Model Code	Get	UINT8	4Eh ('Anybus')	For possible settings, consult the CC-Link Specification (Profile).
4	Network Settings	Get	Array of:		
			UINT8	01h	CC-Link Version: 01h: v1.10 02h: v2.0
			UINT8	(calculated automatically)	Number of Occupied Stations: Valid settings: 01h, 02h, 03h, 04h
			UINT8	1	Number of extension cycles. Valid settings, CC-Link v1: 01h Valid settings, CC-Link v2: 01h, 02h, 04h, 08h
5	System Area Handler	Get	SINT16	(calculated automatically; last 16 bits in the bit area)	System Area handled by... -1: Host application 0...880: Module. Value specifies the offset of the system area in the bit area. Must be located on an even 16-bit boundary.

a. If an attribute is not implemented, the module will use this value instead.

Command Details: Initial_Data_Setting_Notification

Details

Command Code: 10h

Valid for: Object Instance

Description

Note: This section is only relevant when the System Area is handled automatically by the module.

This command will be issued when the master initiates the Initial Data Setting cycle, i.e. on the rising edge of the 'Initial Data Setting Request'-flag.

The host application may either accept or reject (i.e. by responding with 'Unsupported Object' or 'Unsupported Command') the command; in either case, the module will continue the Initial Data Setting Cycle by setting the 'Initial Data Setting Complete'-flag once the response has been received.

- **Command Details**

(No data)

- **Response Details**

(No data)

Implementation Details

SUP-Bit Definition

The Supervised-bit (SUP) indicates that the module is exchanging data with the CC-Link master.

Anybus Statemachine

The table below describes how the Anybus Statemachine relates to the CC-Link network.

Anybus State	Implementation (System Area handled by Anybus module)	Implementation (System Area handled by Host Application)
WAIT_PROCESS	Automatic CC-Link handshaking in progress	Waiting for the first refresh message
ERROR	Possible causes: <ul style="list-style-type: none">- Timeout error (ERR21)- 0 channel carrier detection status (ERR22)- insufficient number of data for the host (ERR30...32) When the problem disappears, the module returns to the previous state.	
PROCESS_ACTIVE	The module enters this state on the rising edge of 'Initial Data Processing Complete'	The module enters this state when the first refresh message has been received
IDLE	PLC/Master in STOP mode When the PLC/Master returns to RUN mode, the module returns to the previous state.	
EXCEPTION	Possible causes: <ul style="list-style-type: none">- Configuration error- other error that cannot be indicated to the application in any other way Examples: <ul style="list-style-type: none">- Illegal combinations of attribute settings in the CC-Link Object (F7h)- Illegal combinations of mapping commands and attribute settings in the CC-Link Object (F7h)	

Application Watchdog Timeout Handling

Upon detection of an application watchdog timeout, the module will cease network participation and shift to state 'EXCEPTION'. No other network specific actions are performed.

CC-Link Handshaking Implementation

Note: This section is only relevant when the System Area is handled automatically by the module.

When the System Area is handled by the Anybus module, all CC-Link handshaking is performed automatically as described in the table below.

Flag	Set when...	Cleared when...
Initial Data Processing Request	State changes from NW_INIT to WAIT_PROCESS	The following sequence has finished: 1. State transition from WAIT_PROCESS to PROCESS_ACTIVE 2. At least one telegram has been sent to the host application 3. At least one telegram has been received from the host application This purpose of this procedure is to ensure that the host application has detected that the module has shifted to the PROCESS_ACTIVE state.
Initial Data Setting Complete	The host application responds to Initial_Data_Setting_Notification ^a	At negative flank of 'Initial Data Setting Request'
Error Status ^b	When there is at least one Diagnostic Instance ^c , and 'Error Reset Request' is false	'Error Reset Request' is set.
Remote READY ^d	(initial setting) - At the rising edge of 'Initial Data Processing Complete' (runtime) - When 'Error Status' and 'Error Reset Request' is false	Either 'Initial Data Setting Request' is set or at least one Diagnostic instance with major severity exist

a. See 6-3 "Command Details: Initial_Data_Setting_Notification"

b. Additional functionality is handled through this flag, see 4-3 "Diagnostics"

c. See 4-3 "Diagnostics"

d. If both the Set and Clear conditions are true, the Clear functionality is given priority

Note: The initial value of the System Area is false, i.e. all flags are cleared during startup.

Exception Information

When the module has entered the EXCEPTION-state, further details about the problem can be read from the 'Exception Information'-attribute (#7) in the Network Object (03h)

Value	Meaning
00h	No information.
01h	Value out of range for SW Version attribute of CC-Link object.
02h	Value out of range for CC-Link version in the Network Settings attribute of the CC-Link object.
03h	Value out of range for Number of stations in the Network Settings attribute of the CC-Link object.
04h	Invalid value for Extension cycles in the Network Settings attribute of the CC-Link object.
05h	Invalid value for System area handler attribute of the CC-Link object.
06h	CC-Link version and extension cycles are incompatible.
07h	Data mapped at too high offset in CC-Link map for CC-Link version 1.
08h	Data mapped at offset where System area is automatically located.
09h	No room for automatically located System area in CC-Link version 1.
0Ah	Data mapped at too high offset in CC-Link map for specified network settings.
0Bh	System area location out of range specified in Network settings.
0Ch	System area located at too high offset in CC-Link map for CC-Link version 1.
0Dh	Data mapped at System area location.
0Eh	Data mapped at location where Anybus Error code should be located according to Network settings.
0Fh	Data mapped at location where Anybus Error code should be located in CC-Link version 1.
10h	The set Device address is too high for the used number of occupied stations.

Technical Specification

Protective Earth (PE) Requirements

In order to ensure proper EMC behaviour, the module must be properly connected to protective earth via the PE pad / PE mechanism described in the general Anybus-CompactCom Hardware Design Guide.

HMS Industrial Networks does not guarantee proper EMC behaviour unless these PE requirements are fulfilled.

Power Supply

Supply Voltage

The module requires a regulated 3.3V power source as specified in the general Anybus-CompactCom Hardware Design Guide.

Power Consumption

The Anybus-CompactCom DeviceNet is designed to fulfil the requirements of a Class B module. For more information about the power consumption classification used on the Anybus-CompactCom platform, consult the general Anybus-CompactCom Hardware Design Guide.

The current hardware design consumes up to 280mA¹.

Note: It is strongly advised to design the power supply in the host application based on the power consumption classifications described in the general Anybus-CompactCom Hardware Design Guide, and not on the exact power requirements of a single product.

Environmental Specification

Consult the Anybus-CompactCom Hardware Design Guide for further information.

EMC Compliance

Consult the Anybus-CompactCom Hardware Design Guide for further information.

1. Note that in line with HMS policy of continuous product development, we reserve the right to change the exact power requirements of this product without prior notification. Note however that in any case, the Anybus-CompactCom CC-Link will remain as a Class B module.

